

COMPONENT LOCATIONS

AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION Page-Figure

Air Injection Relay	Above passenger's footwell	
Air Pump Clutch.....	Below alternator.....	209-2
Coolant Temperature Switch .	RH rear of engine	
Fuse Block.....	Behind RH kick panel	100-1
Idle Speed Adjuster		
Solenoid	Top center of engine	201-2
Idle Speed Control Unit	Above passenger's footwell	
Lambda Electronic Control		
Module (ECM)	Above passenger's footwell	206-1
Switch-Over Valve Solenoid	LH front wheel well	
Washer Motor	Below washer fluid reservoir	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	204-1

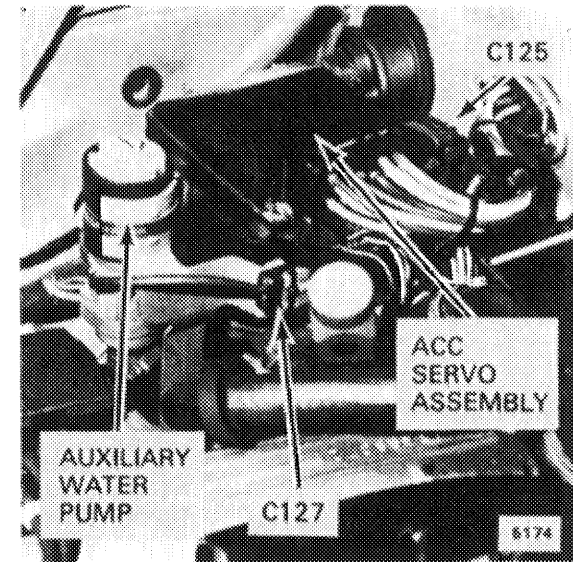


Figure 1 - Right Rear of Engine

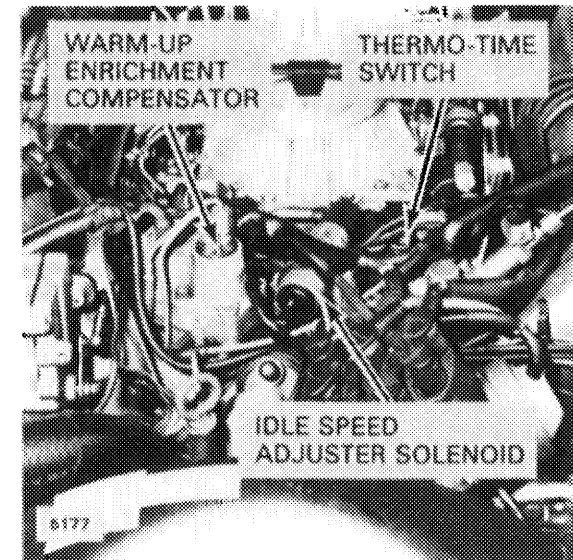


Figure 2 - Top of Engine

COMPONENT LOCATIONS

BACKUP LIGHTS/TRANSMISSION KICKDOWN

		Page-Figure
Fuse Box	Behind RH kick panel	100-1
Kickdown Solenoid	RH front of transmission	209-3
Kickdown Switch	Under accelerator pedal	
Starter Lockout/Backup		
Light Switch.....	LH side of transmission	209-4
C104 (14 pins)	To right of parking brake support	
C146 (6 pins).....	RH side of driver's footwell	
G103	Below LH rear lights	204-2
G104	RH rear wheel well	210-2

CHARGING SYSTEM

Alternator	Front of engine	
Battery	RH side of trunk	
Fuse Box	Behind RH kick panel	100-1
Ignition Switch	Instrument panel, right of steering column	202-2
Starter Assembly	Lower RH rear of engine	
C101 (1 terminal)	RH front wheel well	
C105 (2 terminals)	RH front wheel well	
G100	To LH rear of battery	205-2

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Motor/Relay	Behind LH rear wheel well.....	203-1
Antenna Switch	Above center console	
Fuse Box	Behind RH kick panel	100-1
C104 (14 pins)	To right of parking brake support	

(Chart continued on next page)

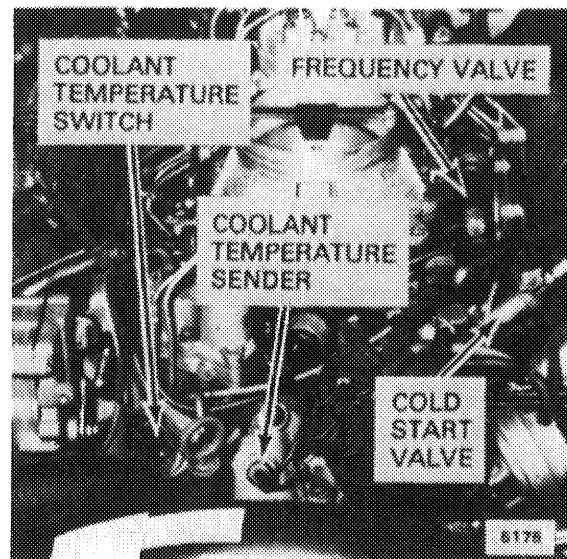


Figure 1 - Top of Engine

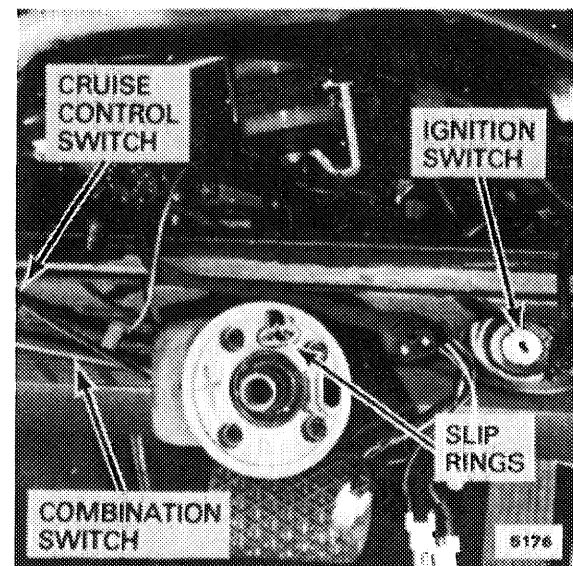


Figure 2 - LH Side of Instrument Panel

COMPONENT LOCATIONS

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA (continued) Page-Figure

C135 (6 pins).....	Behind LH rear wheel well.....	203-1
C151 (15 pins)	Back of instrument cluster	210-3
G102	Behind instrument cluster	
G103	Below LH rear lights	204-2

COURTESY LIGHTS

Diagnostic Plug.....	Top of LH front wheel well	205-1
Door Switches	In each door jamb	
Front Dome Light and Switch	Above rear view mirror assembly	
Fuse Box	Behind RH kick panel	100-1
Parking Brake Switch	On parking brake support	
Warning Module	To right of parking brake support	207-1
Wiper Motor	In center of fresh air duct	
C116 (2 terminals)	LH front wheel well	208-1
C131 (2 pins).....	LH front wheel well	
G102	Behind instrument cluster	

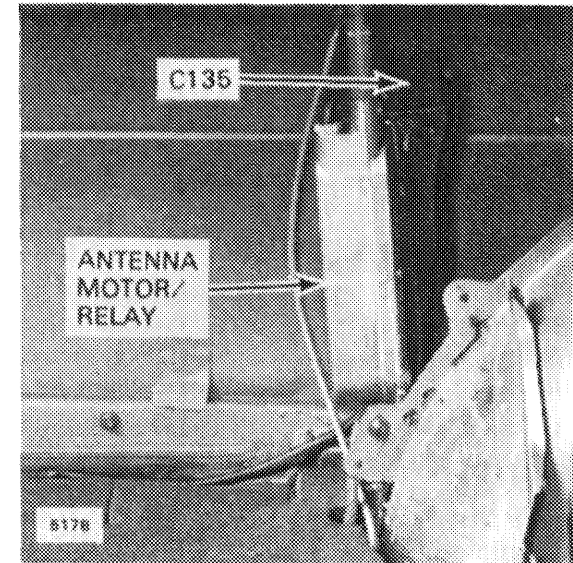


Figure 1 - Behind LH Rear Wheel Well

GLOVE BOX LIGHT/COURTESY LIGHTS

Fuse Box	Behind RH kick panel	100-1
Glove Box Light Switch	LH side of glove box	
Rear Dome Light Switch	On upper console	
C104 (14 pins)	To right of parking brake support	
G102	Behind instrument cluster	

HEADLIGHTS/FOG LIGHTS

Combination Switch	Upper LH side of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	To left of brake pedal support	
C141 (6 pins).....	Behind LH headlight assembly	
C142 (6 pins).....	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	204-1

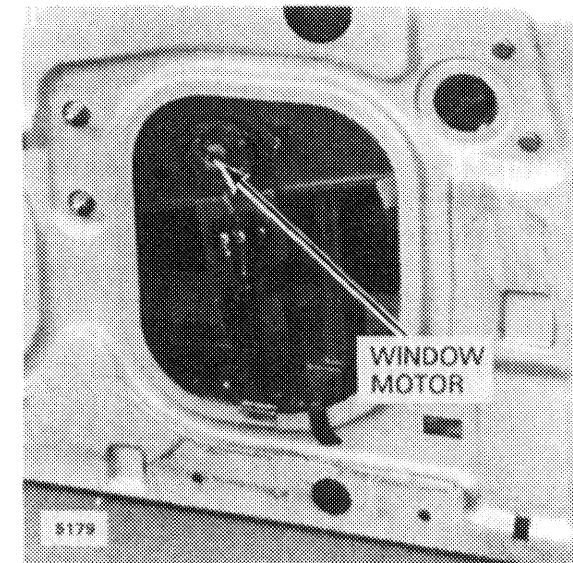


Figure 2 - Driver's Door

HEATED SEATS

Fuse Box	Behind RH kick panel	100-1
Seat Heaters	In each seat cushion	
Seat Heater Switches	On center console	
G102	Behind instrument cluster	

COMPONENT LOCATIONS

HORNS/AUXILIARY FAN

Auxiliary Fan Coolant

Temperature Switch	In water outlet, top front of engine	
Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Relay	In fuse box	206-2
Fuse Box	Behind RH kick panel	100-1
Horn Switch	In steering wheel	
Receiver Drier Temperature Switch	LH side of radiator	204-1
Slip Rings	Behind center of steering wheel	202-2
C106 (14 pins)	To left of brake pedal support	
G101	RH front fender, behind headlights	
G107	LH radiator support	204-1

IGNITION/FUEL DELIVERY

Diagnostic Plug	Top of LH front wheel well	205-1
Electronic Fuel Pump Relay ..	To left of top of fuse box	206-2
Fuel Pump	Under car, behind differential	209-6
Ignition Coil	Between LH front wheel well and LH headlight	208-1
Ignition Distributor	On front top of engine	
Ignition Switching Unit	Ahead of LH front wheel well	208-1
Lambda Voltage Supply Relay	In fuse box	206-2
Resistors	LH front wheel well	210-4
Warm-Up Enrichment Compensator	Top front of engine	201-2
C104 (14 pins)	To right of parking brake support	
C105 (2 terminals)	RH front wheel well	
C116 (2 terminals)	LH front wheel well	208-1
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G104	RH rear wheel well	210-2
G106	Ignition coil mounting bracket	

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

Fuse Box	Behind RH kick panel	100-1
Hazard Warning Switch/Flasher	On center console	
C151 (15 pins, round)	On rear of instrument cluster	210-3
C152 (4 pins)	On rear of instrument cluster	210-3
G102	Behind instrument cluster	

Page-Figure

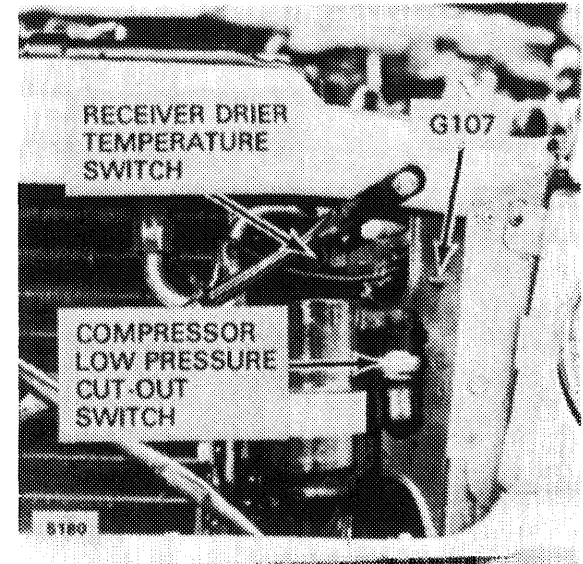


Figure 1 - LH Radiator Support

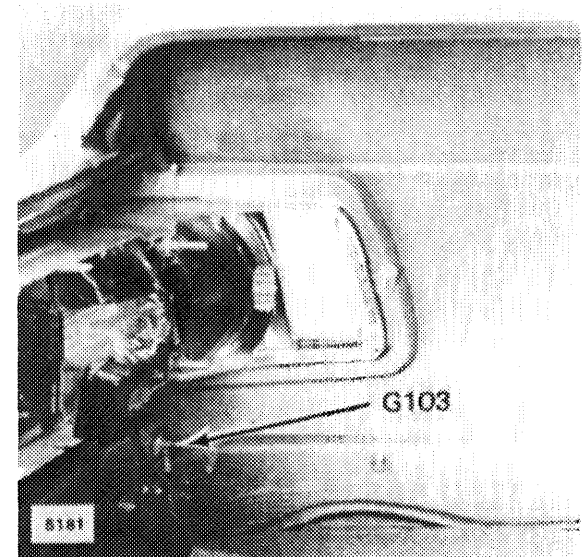


Figure 2 - Below LH Rear Lights

COMPONENT LOCATIONS

LAMBDA CONTROL

Page-Figure

Diagnostic Plug	Top of LH front wheel well	205-1
Frequency Valve	Between LH valve cover and flow sensor ..	202-1
Fuse Box	Behind RH kick panel	100-1
Lambda Electronic Control		
Module (ECM)	Passenger's footwell, behind access panel	206-1
Lambda Voltage Supply		
Relay	In fuse box	206-2
Oil Temperature Switch	Beside oil filter	210-1
Over Voltage Protection		
Unit	To left of top of fuse box	206-2
Oxygen Sensor	On exhaust pipe, below primary catalyst	
Throttle Switch	On side of throttle valve housing	
C105 (2 terminals)	RH front wheel well	
C143 (coaxial)	Near oxygen sensor	
C144 (3 pins)	On washer reservoir	
C145 (1 pin)	Behind LH headlights	205-1
G102	Behind instrument cluster	
G108	Front of engine, at lifting bracket	210-5

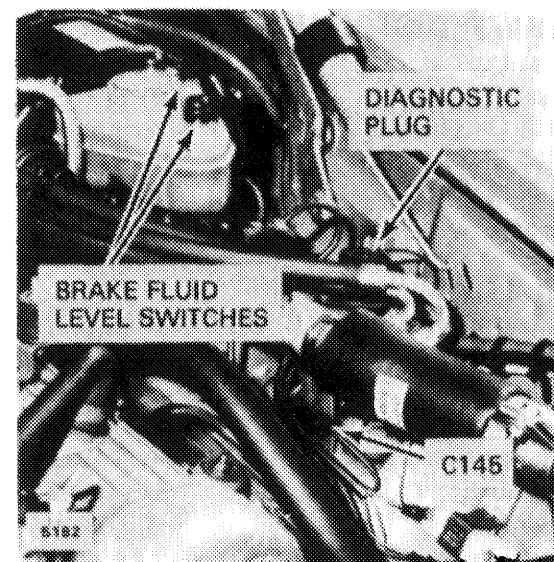


Figure 1 - LH Front Wheel Well

LIGHTS: MARKER/LICENSE/TRUNK

Fuse Box	Behind RH kick panel	100-1
C104 (14 pins)	To right of parking brake support	
C135 (6 pins)	Behind LH rear wheel well	203-1
C141 (6 pins)	Behind LH headlight assembly	
C142 (6 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G103	Below LH rear lights	204-2
G104	RH rear wheel well	210-2
G107	LH radiator support	204-1

LIGHTS: PARK/TAIL

Fuse Box	Behind RH kick panel	100-1
C104 (14 pins)	To right of parking brake support	
C141 (6 pins)	Behind LH headlight assembly	
C142 (6 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G103	Below LH rear lights	204-2
G104	RH rear wheel well	210-2
G107	LH radiator support	204-1

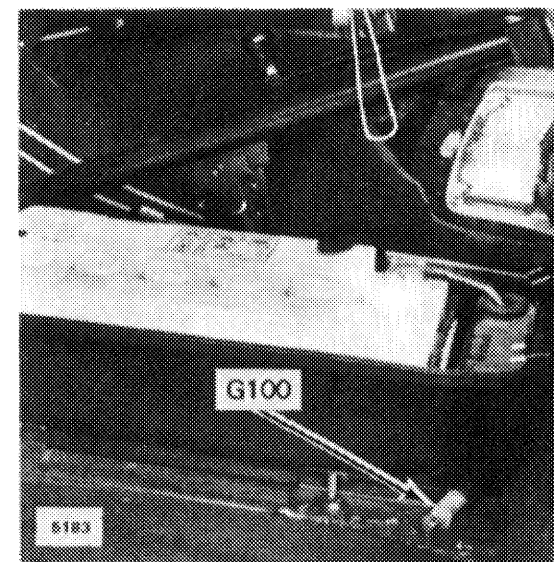


Figure 2 - RH Side of Trunk

COMPONENT LOCATIONS

POWER DISTRIBUTION

		Page-Figure
Fuse Box	Behind RH kick panel	100-1
Starter Assembly	Lower RH rear of engine	
C104 (14 pins)	To right of parking brake support	
C105 (2 terminals)	RH front wheel well	
C146 (6 pins).....	RH side of driver's footwell	
G100	LH rear corner of battery	205-2

POWER WINDOWS

Console Switch Group	On center console	
Front Window Switches	Below each front window	
Fuse Box	Behind RH kick panel	100-1
Rear Window Switches	Below each rear window	
Window Motors	Below each window	203-2
Window Relay	LH side of passenger's footwell	
C107 (6 pins).....	Under console	
C108 (2 pins).....	Under console	
G102	Behind instrument cluster	

REAR DEFOGGER/SLIDING ROOF

Fuse Box	Behind RH kick panel	100-1
Rear Defogger Switch	On upper console	
Rear Defogger Timer Relay ..	To right of parking brake support	
Sliding Roof Motor.....	Above LH rear wheel well	209-1
Sliding Roof Switch.....	On upper console	
C104 (14 pins)	To right of parking brake support	
G102	Behind instrument cluster	
G104	RH rear wheel well	210-2

START

Cold-Start Valve	Near front of LH valve cover	202-1
Electronic Fuel Pump Relay	To left of top of fuse box	206-2
Fuse Box	Behind RH kick panel	100-1
Ignition Switch.....	Instrument panel, right of steering column..	202-2
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup		
Light Switch.....	LH side of transmission	209-4
Thermo-Time Switch	Top of engine, in front of air horn.....	201-2
C101 (2 terminals)	RH front wheel well	
C105 (2 terminals)	RH front wheel well	
G100	LH rear corner of battery	205-2

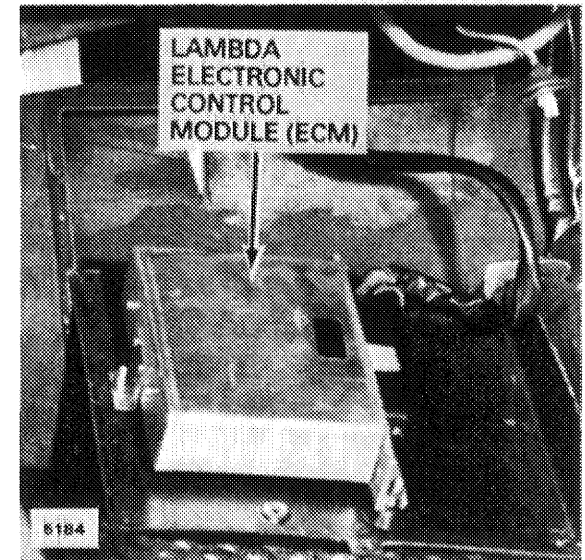


Figure 1 - Passenger's Footwell

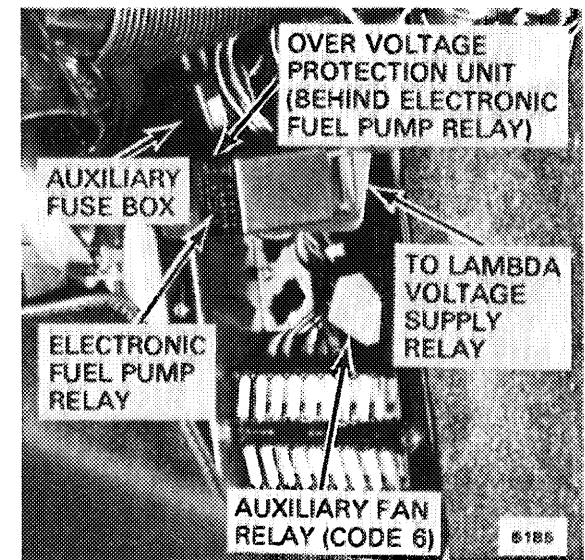


Figure 2 - RH Kick Panel

COMPONENT LOCATIONS

STOPLIGHTS/CRUISE CONTROL

		Page-Figure
Brake Switch	Top of brake pedal support	
Cruise Control Actuator	RH front corner of engine compartment	210-5
Cruise Control Amplifier	Between parking brake and brake support	207-1
Cruise control Switch	Upper LH side of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
C104 (14 pins)	To right of parking brake support	
C140 (6 pins).....	Near cruise control amplifier	
C151 (15 pins, round)	On rear of instrument cluster	210-3
C152 (4 pins).....	On rear of instrument cluster	210-3
C164 (8 pins).....	Behind RH headlights	
G101	Behind RH headlights	
G102	Behind instrument cluster	
G103	Below LH rear light assembly	204-2
G104	RH rear wheel well	210-2

TURN SIGNAL/HAZARD LIGHTS

Combination Switch	Upper LH side of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
Hazard Warning Switch/ Flasher	On center console	
C104 (14 pins)	To right of parking brake support	
C106 (14 pins)	To left of brake pedal support	
C141 (6 pins).....	Behind LH headlight assembly	
C142 (6 pins).....	Behind RH headlight assembly	
C151 (15 pins, round)	On rear of instrument cluster	210-3
C152 (4 pins).....	On rear of instrument cluster	210-3
G101	Behind RH headlights	
G102	Behind instrument cluster	
G103	Below LH rear lights	204-2
G104	RH rear wheel well	210-2
G107	LH radiator support	204-1

WARNING INDICATORS/GAUGES/CLOCK

Brake Wear Sensors.....	In each front brake pad	
Coolant Temperature Sender	On H ₂ O outlet	202-1
Diagnostic Plug	Top of LH front wheel well	205-1
Fuel Gauge Sender (380 SL)	Behind rear seat, under top boot	
(380 SLC).....	Under package tray	
Fuse Box	Behind RH kick panel	100-1
Ignition Distributor	On front top of engine	

(Chart continued on next page)

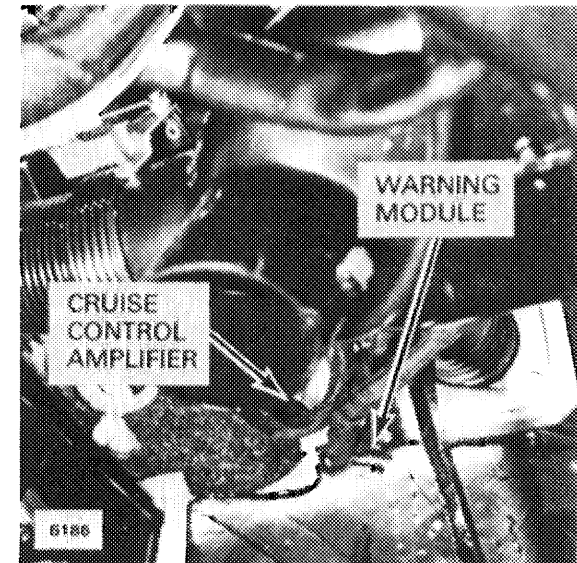


Figure 1 - Above Brake Pedal

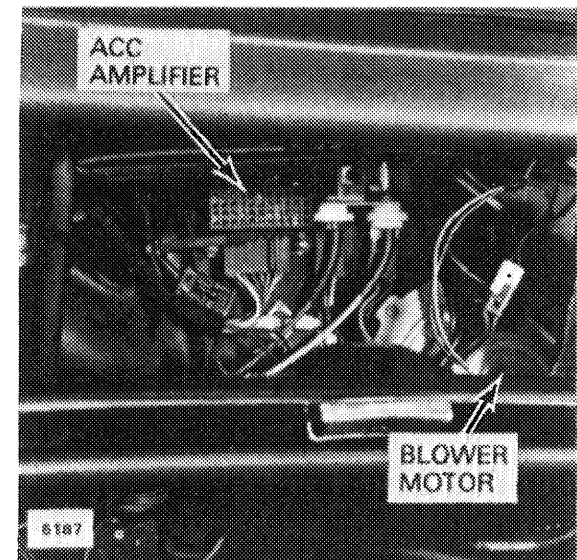


Figure 2 - Behind Glove Box

COMPONENT LOCATIONS

WARNING INDICATORS/GAUGES/CLOCK (continued)		Page-Figure
Ignition Switching Unit.....	Ahead of LH front wheel well	208-1
Impulse Transmitter	Rear of LH side of transmission	209-4
Oil Pressure Sender	Above oil filter	
Wiper Motor	In center of fresh air duct	
C104 (14 pins)	To right of parking brake support	
C116 (2 terminals)	On front of LH front wheel well	208-1
C131 (2 pins).....	On top of LH front wheel well	
C132 (2 pins).....	Behind RH front wheel well	
C146 (6 pins).....	RH side of driver's footwell	
C151 (15 pins, round)	On rear of instrument cluster	210-3
C152 (4 pins).....	On rear of instrument cluster	210-3
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G104	RH rear wheel well	210-2
G106	Ignition coil mounting bracket	

WARNING SYSTEM

Brake Fluid Level		
Switches	Brake fluid reservoir	205-1
Brake Wear Sensors	In each front brake pad	
Door Switches	In each door jamb	
Driver's Seatbelt Switch	Part of driver's seatbelt assembly	
Fuse Box	Behind RH kick panel	100-1
Key Warning Switch	Part of ignition switch	208-2
Parking Brake Switch	On parking brake support	
Warning Module	Above brake pedal	207-1
Wiper Motor	In center of fresh air duct	
C131 (2 pins).....	On top of LH front wheel well	
C151 (15 pins, round)	On rear of instrument cluster	210-3
C152 (4 pins).....	On rear of instrument cluster	210-3
C166 (2 pins).....	Under driver's seat	
G102	Behind instrument cluster	

WIPER/WASHER

Combination Switch	Upper LH side of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
Interval Wipe Control	Behind instrument cluster	
Washer Motor	Below washer fluid reservoir	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	To left of brake pedal support	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	

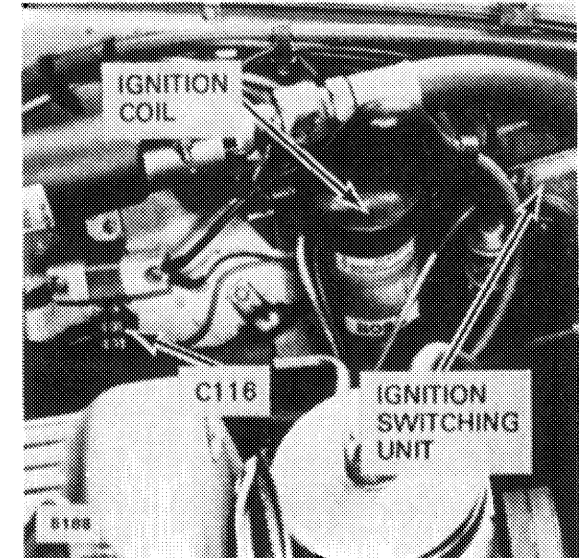


Figure 1 - LH Front Wheel Well

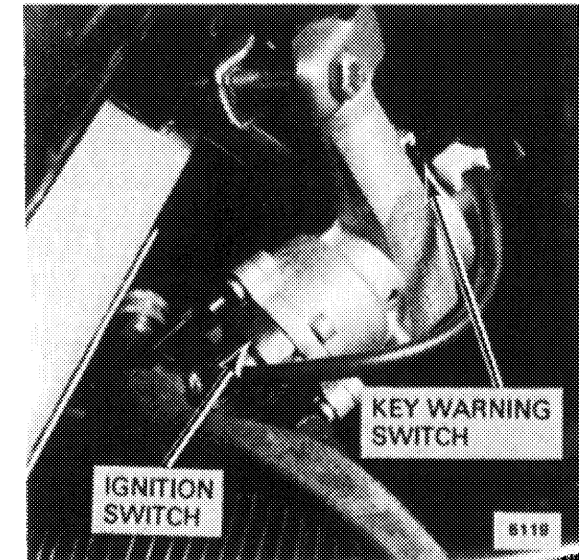


Figure 2 - Behind Instrument Panel

COMPONENT LOCATIONS

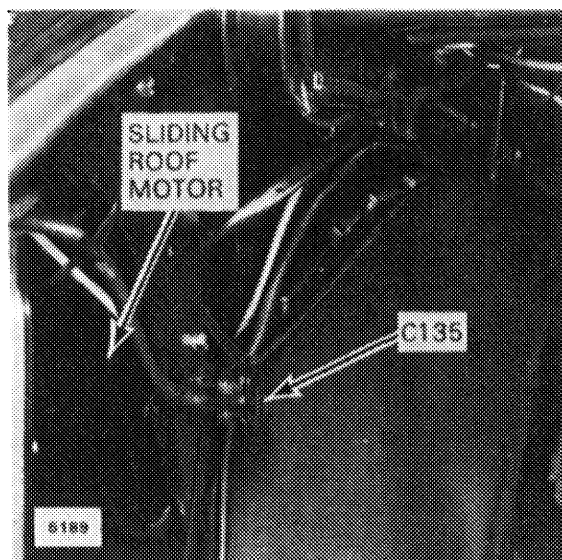


Figure 1 - Behind LH Rear Wheel Well
(SLC only)

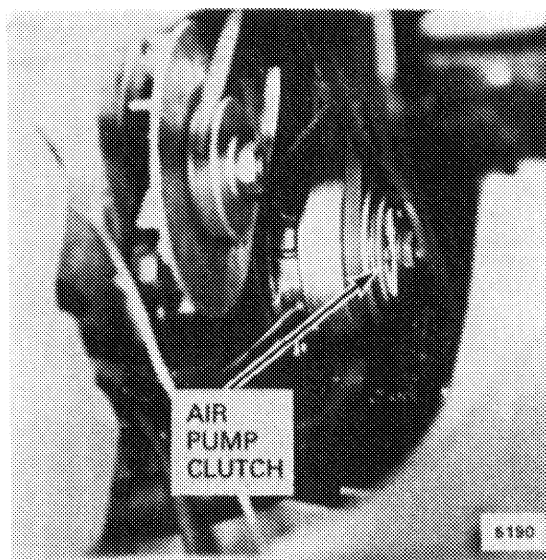


Figure 2 - Lower Front of Engine

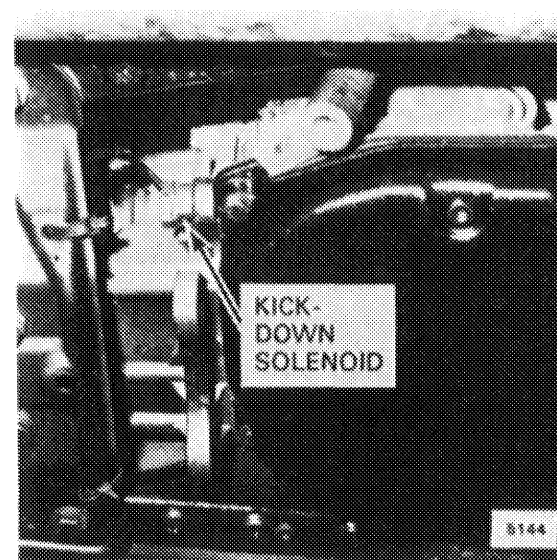


Figure 3 - RH Side of Transmission

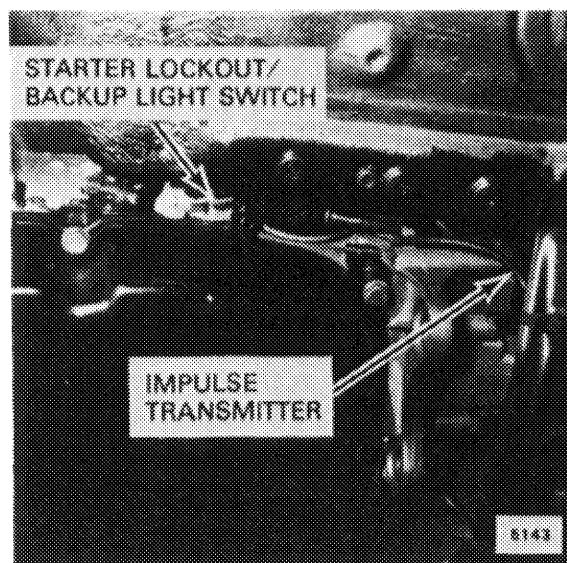


Figure 4 - LH Side of Transmission

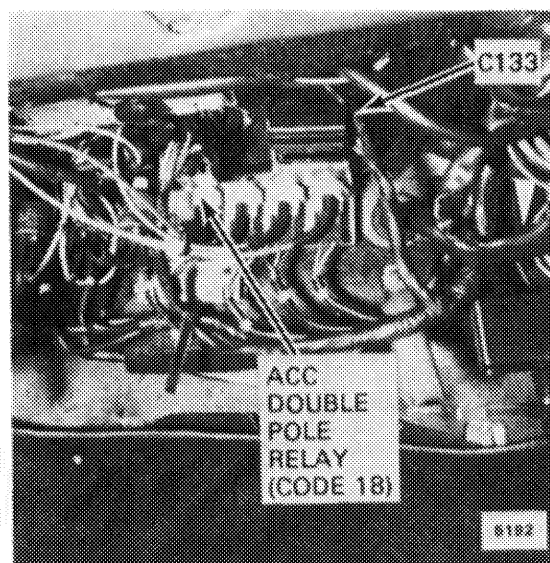


Figure 5 - Behind Glove Box

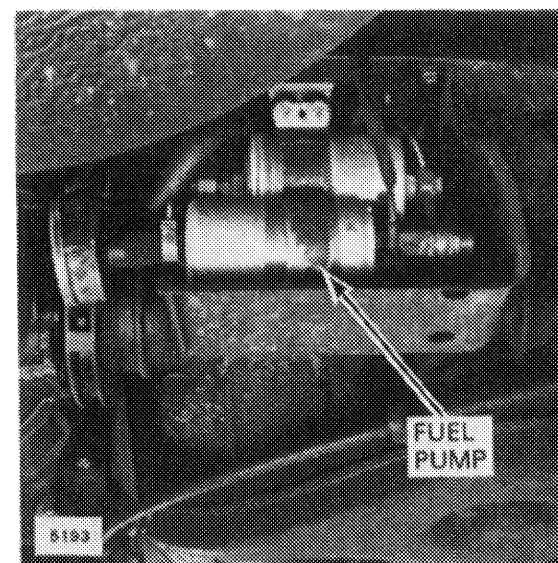


Figure 6 - Behind Differential

COMPONENT LOCATIONS

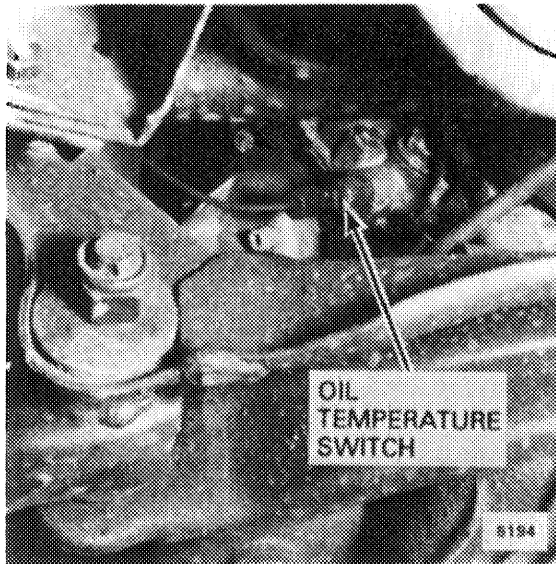


Figure 1 - Base of Oil Filter

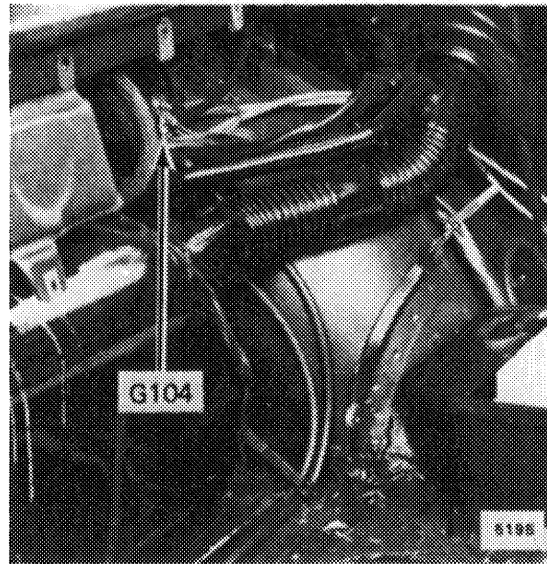


Figure 2 - Front RH Side of Trunk

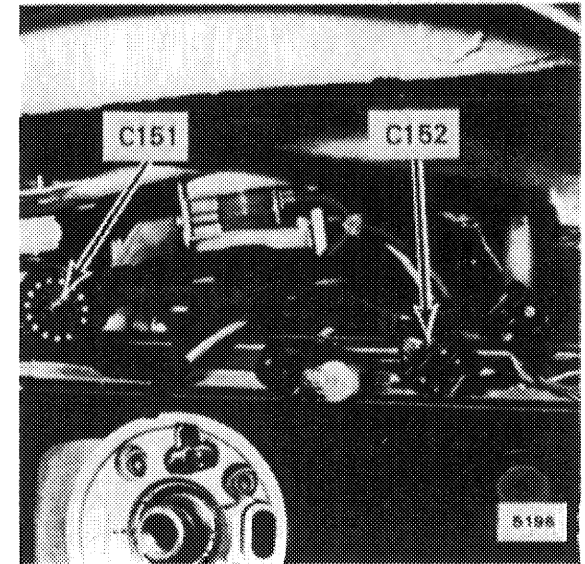


Figure 3 - Behind Instrument Cluster

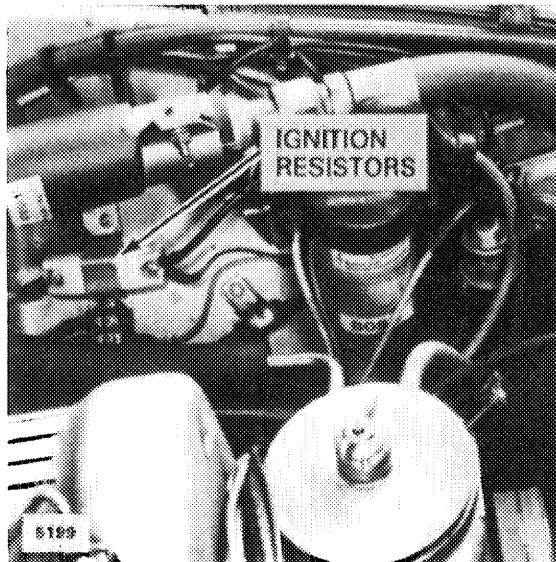


Figure 4 - LH Front Wheel Well

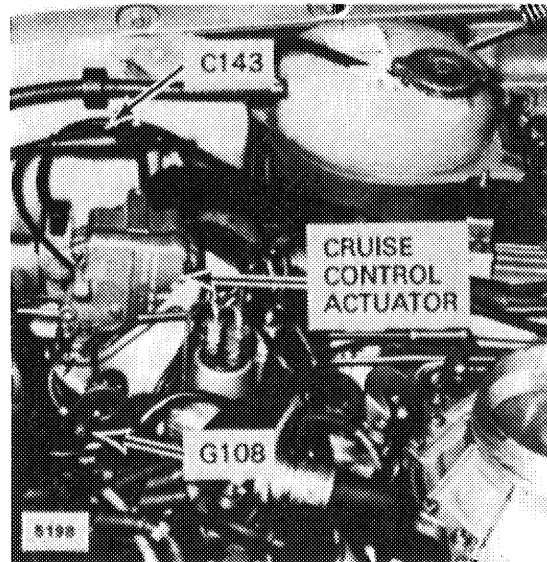


Figure 5 - RH Front of Engine