

COMPONENT LOCATIONS

AUTOMATIC CLIMATE CONTROL

Page-Figure

ACC Amplifier	Behind glove box	207-2
ACC Compressor Clutch	Behind glove box	
ACC Control Panel	On upper console	
ACC Double Pole Relay	Behind glove box	209-5
ACC Servo Assembly	To right of LH rear of valve cover	201-1
A/C In-Line Fuses	Auxiliary fuse box, on top of fuse box	206-2
A/C Start Relay	In fuse box	
Ambient Temperature Sensor	Off RH bottom corner of chassis number plate	
Auxiliary Water Pump	Between servo and cruise control actuator.....	201-1
Bi-Level Compressor		
Vacuum Switch	Behind glove box	
Blower Master Vacuum		
Switch	Behind glove box	
Blower Motor	To ACC plenum	
Blower Resistors	In blower housing	201-2
Compressor Low-Pressure		
Cut-Out Switch	LH side of receiver drier	210-3
Compressor Vacuum Switch	Behind glove box	
Evaporator Temperature		
Regulator	Behind glove box	
Fuse Box	Behind RH kick panel	100-1
In-Car Temperature Sensor.	Attached to A/C rocker switch	
Switch-Over Valves	Behind upper console	
C101 (1 terminal)	In trunk, ahead of battery box	
C125 (6 pins).....	Behind ACC servo assembly	201-1
C126 (2 pins).....	Behind RH side of glove box	
C127 (2 pins).....	Behind auxiliary water pump	210-5
C128.....	Near blower motor	
C133 (12 pins)	Behind glove box	209-5
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	204-1

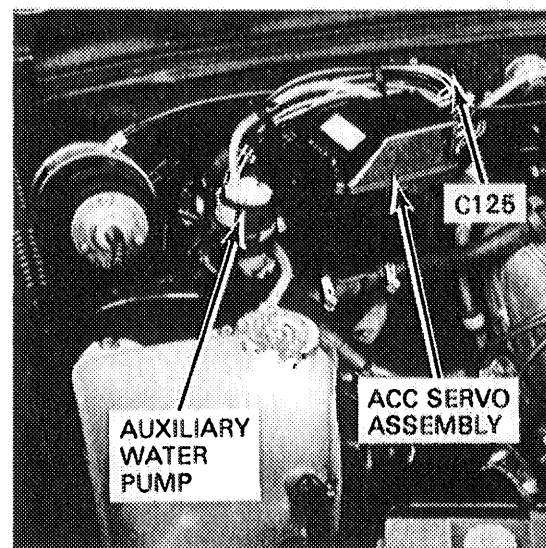


Figure 1 - To Right Rear of Engine

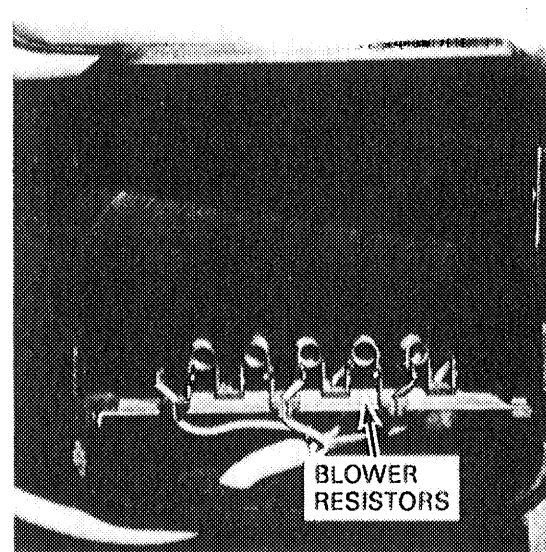


Figure 2 - Blower Resistors (Mounted in Blower Housing)

COMPONENT LOCATIONS

AUXILIARY FAN

		Page-Figure
Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Relay	In fuse box	206-2
Coolant Temperature Switch	In water outlet, top front of engine	210-4
Fuse Box	Behind RH kick panel	100-1
Receiver Drier Temperature Switch	On top of receiver drier.....	210-3
G101	RH front fender, behind headlights	
G107	LH radiator support	204-1

BACKUP LIGHTS/TRANSMISSION KICKDOWN

Fuse Box	Behind RH kick panel	100-1
Kickdown Solenoid	RH front of transmission	209-3
Kickdown Switch	Under accelerator pedal.....	207-1
Starter Lockout/Backup Light Switch.....	LH side of transmission	209-4
C104 (14 pins)	To right of parking brake support	
G103	Below LH rear lights	204-2
G104	Under front RH side of trunk frame	210-2

CENTER CONSOLE ILLUMINATION

Fuse Box	Behind RH kick panel	100-1
Hazard Warning Switch/Flasher	In center console	
Light Switch.....	Instrument panel, left of steering column	
G102	Behind instrument cluster	

CHARGING SYSTEM

Alternator	Front of engine	
Battery	RH side of trunk	
Fuse Box	Behind RH kick panel	100-1
Ignition Switch	Instrument panel, right of steering column	202-2
Light Switch.....	Instrument panel, left of steering column	
Starter Assembly	Lower RH rear of engine	
C101 (1 terminal)	In trunk, ahead of battery box	
C105 (4 terminals)	Front of LH front wheel well	
G100	To LH rear side of battery	205-2

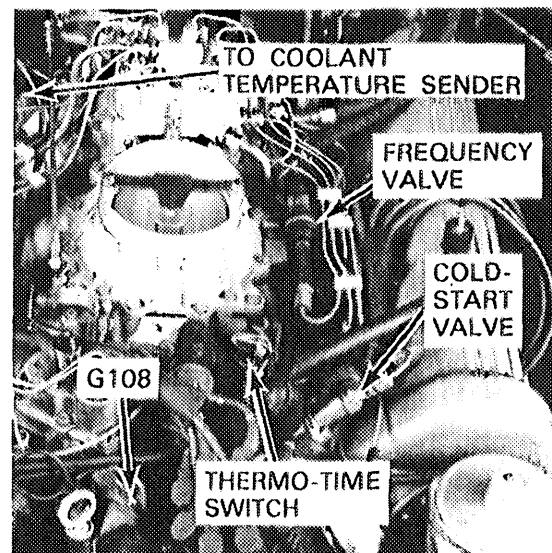


Figure 1 - Top of Engine

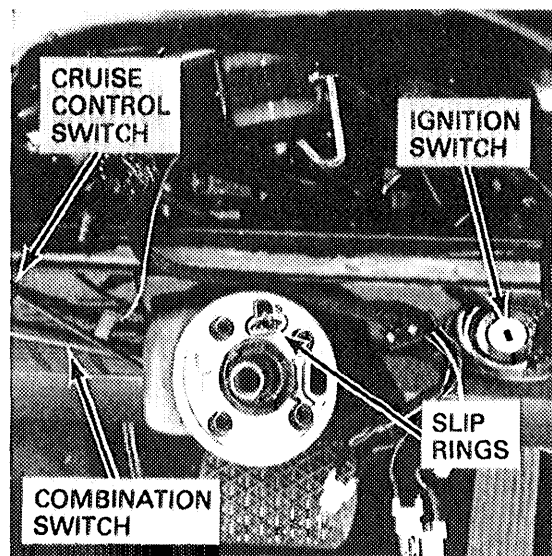


Figure 2 - LH Side of Instrument Panel

COMPONENT LOCATIONS

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

		Page-Figure
Antenna Motor/Relay	Behind LH rear wheel well.....	203-1
Antenna Switch	On upper console	
Fuse Box	Behind RH kick panel	100-1
C104 (14 pins)	To right of parking brake support	
C135 (6 pins).....	Behind LH rear wheel well.....	203-1
G102	Behind instrument cluster	
G103	Below LH rear lights	204-2

COURTESY LIGHTS

Brake Wear Sensors	In front brake pads	
Door Switches	In each door jamb	
Front Dome Light and Switch	Behind rear view mirror assembly	
Fuse Box	Behind RH kick panel	100-1
Parking Brake Switch	At parking brake	
Rear Dome Light Switch	On upper console	
Warning Module	Behind instrument panel, left of steering column.....	207-1
Wiper Motor	In center of fresh air duct	
C104 (14 pins)	To right of parking brake support	
C116 (2 terminals)	Lower front part of LH front wheel well	208-1
C131 (2 pins).....	On top of LH front wheel well	
G102	Behind instrument cluster	

GLOVE BOX LIGHT

Fuse Box	Behind RH kick panel	100-1
Glove Box Light Switch	LH side of glove box	
G102	Behind instrument cluster	

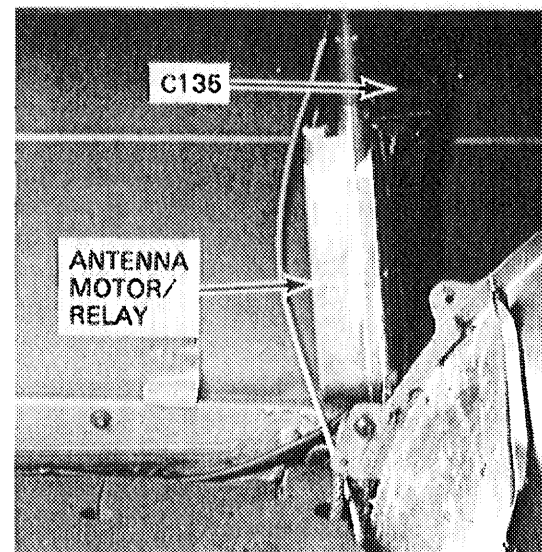


Figure 1 - Behind LH Rear Wheel Well

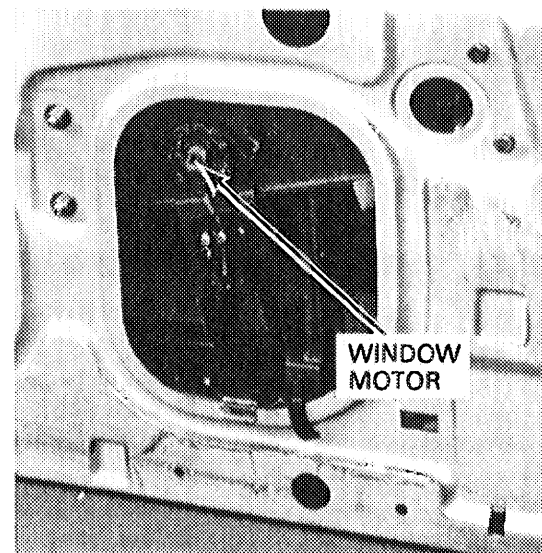


Figure 2 - Driver's Door

COMPONENT LOCATIONS

HEADLIGHTS/FOGLIGHTS

		Page-Figure
Combination Switch	Upper LH of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
Light Switch	Instrument panel, left of steering column	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	Rear combination switch	
C141 (6 pins)	Behind LH headlights	
C142 (6 pins)	Behind RH headlights	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	204-1

HEATED SEATS

Fuse Box	Behind RH kick panel	100-1
Seat Heaters	In each seat cushion	
Seat Heater Switches	In center console	
G102	Behind instrument cluster	

HORNS

Fuse Box	Behind RH kick panel	100-1
Horn Switch	Behind center of steering wheel	
Slip Rings	Behind steering wheel	202-2
C106 (14 pins)	Rear combination switch	
G101	RH front fender, behind headlights	
G107	LH radiator support	204-1

LIGHTS: PARK/TAIL OR MARKER/LICENSE/TRUNK

Fuse Box	Behind RH kick panel	100-1
Light Switch	Instrument panel, left of steering column	
C104 (14 pins)	To right of parking brake support	
C141 (6 pins)	Behind LH headlights	
C142 (6 pins)	Behind RH headlights	
G101	RH front fender, behind headlights	
G103	Below LH rear lights	204-2
G104	Under front RH side of trunk frame	210-2
G107	LH radiator support	204-1

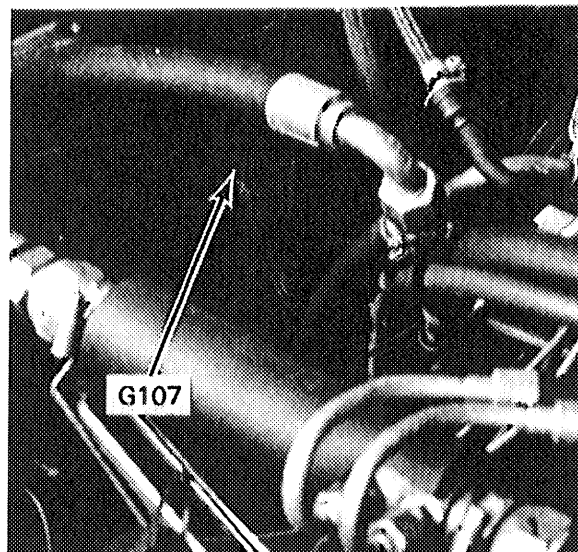


Figure 1 - LH Radiator Support

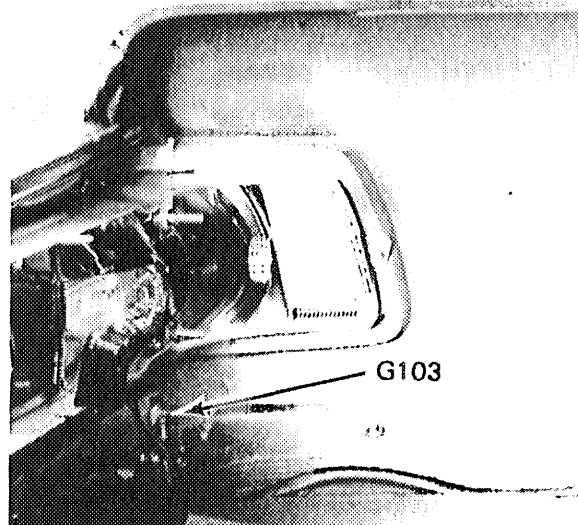


Figure 2 - Below LH Rear Lights

COMPONENT LOCATIONS

POWER DISTRIBUTION

		Page-Figure
Diagnostic Plug	Top of LH front wheel well	205-1
Fuse Box	Behind RH kick panel	100-1
Ignition Switch	Instrument panel, right of steering column	202-2
Starter Assembly	Lower RH rear of engine	
C104 (14 pins)	To right of parking brake support	
C105 (4 terminals)	Front of LH front wheel well	
C141 (6 pins).....	Behind LH headlights	
G101	RH front fender, behind headlight	

POWER WINDOWS

Console Switch Group	Behind LH side of gear shift selector	
Front Window Switches	Below each front window	
Fuse Box	Behind RH kick panel	100-1
Rear Window Switches	Below each rear window	
Window Motors	Below each window	203-2
Window Relay	LH kick panel	
C107 (6 pins).....	Under console	
C108 (2 pins).....	Under console	
G102	Behind instrument cluster	

REAR DEFOGGER

Fuse Box	Behind RH kick panel	100-1
Rear Defogger Switch	On upper console	
Rear Defogger Timer Relay.	To right of parking brake support	
C104 (14 pins)	To right of parking brake support	
G102	Behind instrument cluster	
G104	Under front RH side of trunk frame	210-2

SLIDING ROOF

Fuse Box	Behind RH kick panel	100-1
Sliding Roof Motor.....	Above LH rear wheel well	209-1
Sliding Roof Switch	On upper console assembly	
G102	Behind instrument cluster	

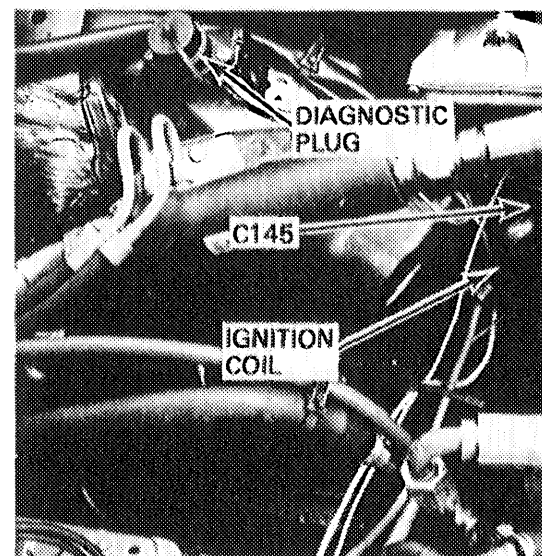


Figure 1 - LH Front Wheel Well

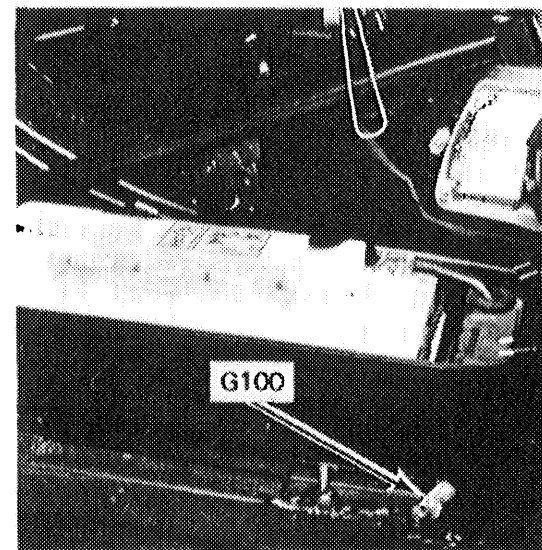


Figure 2 - RH Side of Trunk

COMPONENT LOCATIONS

START/IGNITION/FUEL DELIVERY/LAMBDA CONTROL

Page-Figure

A/C-Start Relay	In fuse box	
Cold-Start Valve	To right of front part of LH valve cover	202-1
Diagnostic plug	Top of LH front wheel well	205-1
Electronic Fuel Pump Relay	To left of top of fuse box	206-2
Frequency Valve	Between LH valve cover and air flow sensor ..	202-1
Fuel Pump	Behind differential	209-6
Fuse Box	Behind RH kick panel	100-1
Ignition Coil	Between LH front wheel well and LH headlight	205-1
Ignition Distributor	Front top part of engine	
Ignition Switch	Instrument panel, right of steering column....	202-2
Ignition Switching Unit.....	Ahead of LH front wheel well	208-1
Lambda Electronic Control Module (ECM)	Above passenger's footwell, behind instrument panel	206-1
Lambda Voltage Supply Relay	In fuse box	206-2
Oil Temperature Switch	Beside oil filter	210-1
Over Voltage Protection Unit	To left of top of fuse box	206-2
Oxygen Sensor	On exhaust pipe, below primary catalyst	209-3
Resistors	Behind LH headlights	210-6
Starter Assembly	Lower RH side of engine	
Starter Lockout/Backup Light Switch	LH side of transmission	209-4
Thermo-Time Switch	Off front LH corner of air blow sensor assembly	202-1
Throttle Switch	On side of throttle valve housing	
Warm-Up Enrichment Compensator	To left of RH valve cover	
C101 (1 terminal)	In trunk, ahead of battery box	
C104 (14 pins)	To right of emergency brake support	
C105 (4 terminals)	Front of LH front wheel well	
C116 (2 terminals)	Lower front part of LH front wheel well	208-1
C143 (2 pins).....	Near oxygen sensor	
C144 (3 pins).....	Below battery	
C145 (1 pin).....	Behind LH headlights	205-1
G100	To LH rear side of battery	205-2
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G103	Below LH rear light assembly	204-2
G106	At base of ignition coil	
G108	Front of engine, at lifting bracket	202-1

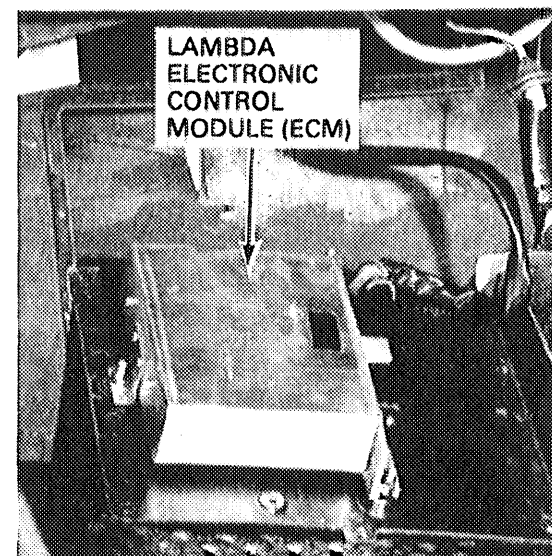


Figure 1 - Above Passenger's Footwell

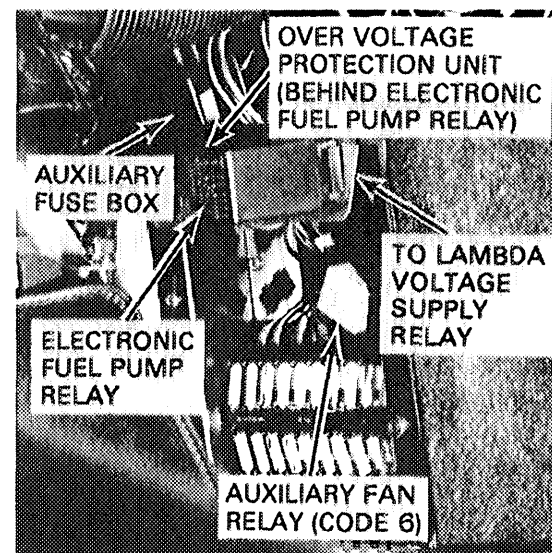


Figure 2 - RH Kick Panel

COMPONENT LOCATIONS

STOPLIGHTS/CRUISE CONTROL

Page-Figure

Brake Switch	Brake pedal support	
Cruise Control Actuator	LH rear corner of engine compartment	210-5
Cruise Control Amplifier	Between parking brake and brake support	207-1
Cruise control Switch	Upper LH side of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
Vehicle Speed Sensor	Mounted on speedometer	209-2
C104 (14 pins)	To right of parking brake support	
C140 (6 pins)	Near cruise control amplifier	
G102	Behind instrument cluster	
G103	Below LH rear lights assembly	204-2
G104	Under front RH side of trunk frame	210-2

TURN SIGNAL/HAZARD LIGHTS

Combination Switch	Upper LH of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
Hazard Warning Switch/ Flasher	In center console	
C104 (14 pins)	To right of parking brake support	
C106 (14 pins)	Rear combination switch	
C141 (6 pins)	Behind LH headlights	
C142 (6 pins)	Behind RH headlights	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G103	Below LH rear light assembly	204-2
G104	Under front RH side of trunk frame	210-2
G107	LH radiator support	204-1

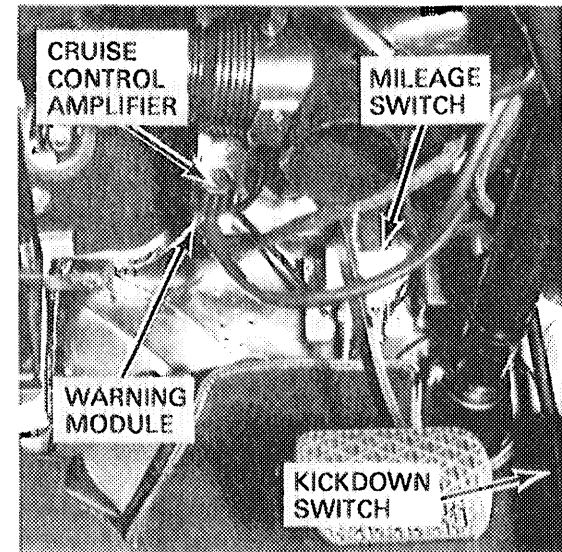


Figure 1 - Above Brake Pedal

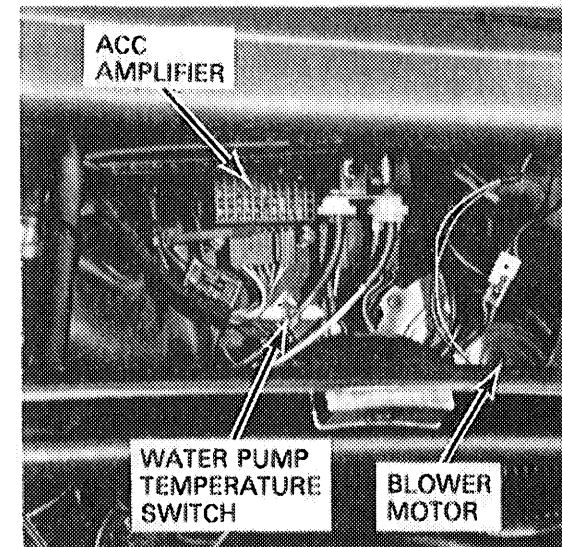


Figure 2 - Behind Glove Box

COMPONENT LOCATIONS

WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

		Page-Figure
Brake Wear Sensors	In front brake pads	
Coolant Temperature Sender	Top rear of RH cyclinder head	202-1
Diagnostic Plug	Top of LH front wheel well	205-1
Fuel Gauge Sender		
(450 SL)	Behind rear seat, under top boot	
(450 SLC)	Under package tray	
Fuse Box	Behind RH kick panel	100-1
Ignition Switching Unit.....	Connected to front of LH front wheel well	208-1
Wiper Motor	In center of fresh air duct	
C104 (14 pins)	To right of parking brake support	
C116 (2 terminals)	Lower front part of LH front wheel well	208-1
C131 (2 pins)	On top of LH front wheel well	
C132 (2 pins)	Behind RH front wheel well	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G104	Under front RH side of trunk frame	210-2
G106	At base of ignition coil	

WARNING SYSTEM

Brake Fluid Level		
Switches	In brake fluid reservoir	
Brake Wear Sensors	In front brake pads	
Door Switches	In each door jamb	
Driver's Seatbelt Switch.	Part of driver's seatbelt assembly	
Fuse Box	Behind RH kick panel	100-1
Key Warning Switch	Part of ignition switch	208-2
Parking Brake Switch	At parking brake	
Warning Module	Above brake pedal	207-1
Wiper Motor	In center of fresh air duct	
C131 (2 pins)	On top of LH front wheel well	
G102	Behind instrument cluster	

WIPER/WASHER

Combination Switch	Upper LH of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
Interval Wipe Control		
Washer Motor	Below washer fluid reservoir	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	Rear combination switch	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	

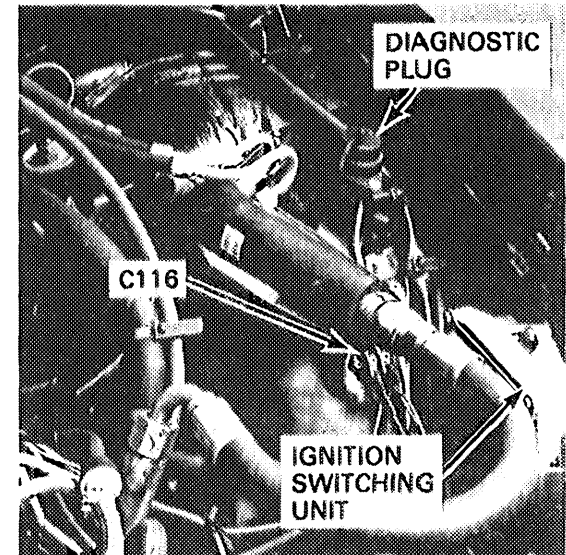


Figure 1 - LH Front Wheel Well

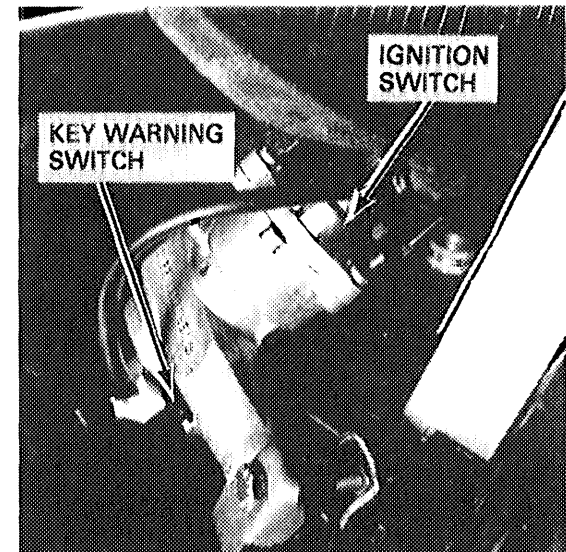


Figure 2 - Behind Instrument Panel, at Instrument Cluster

COMPONENT LOCATIONS

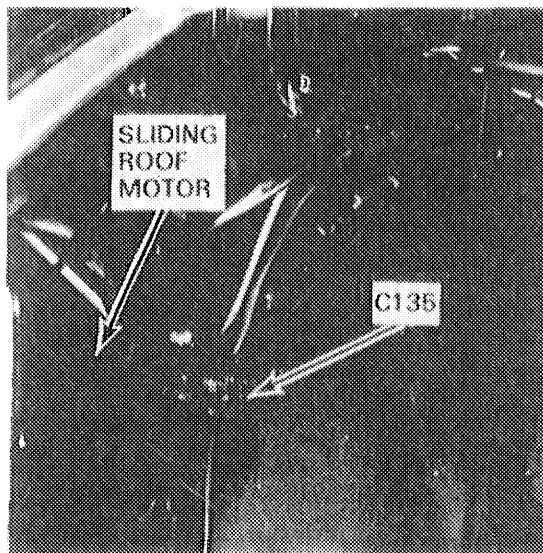


Figure 1 - Behind LH Rear Wheel Well

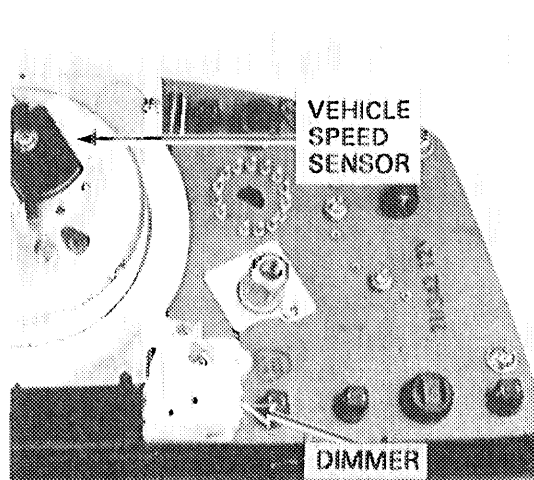


Figure 2 - Back of Instrument Cluster

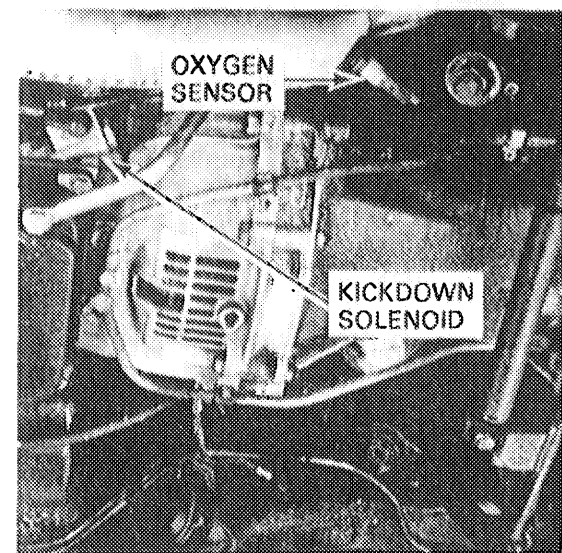


Figure 3 - RH Side of Transmission

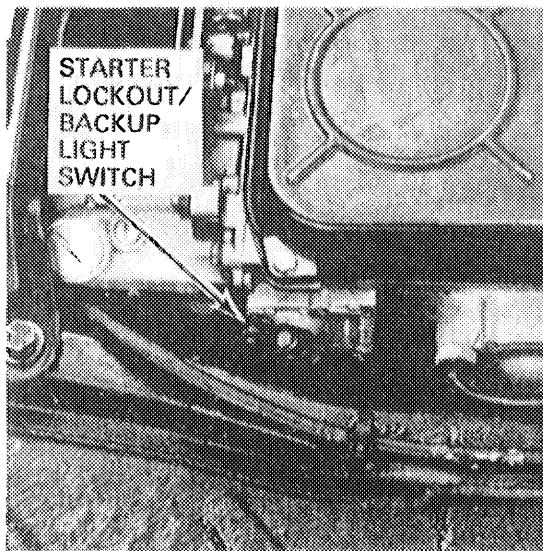


Figure 4 - LH Side of Transmission

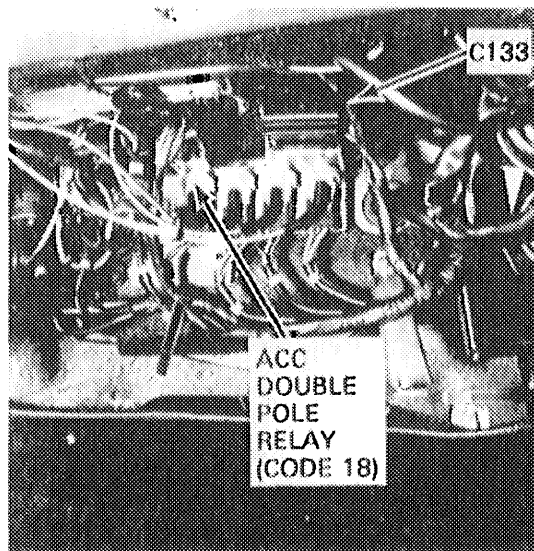


Figure 5 - Behind Glove Box

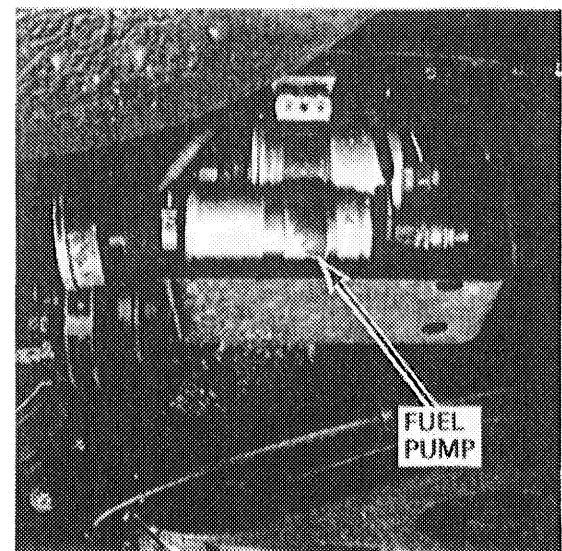


Figure 6 - Behind Differential

COMPONENT LOCATIONS

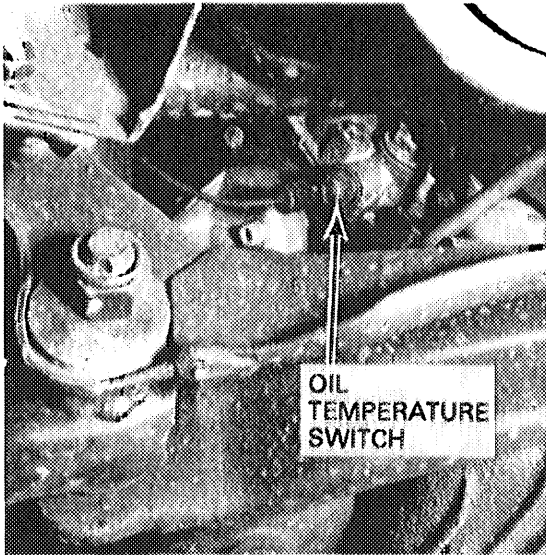


Figure 1 - Base of Oil Filter

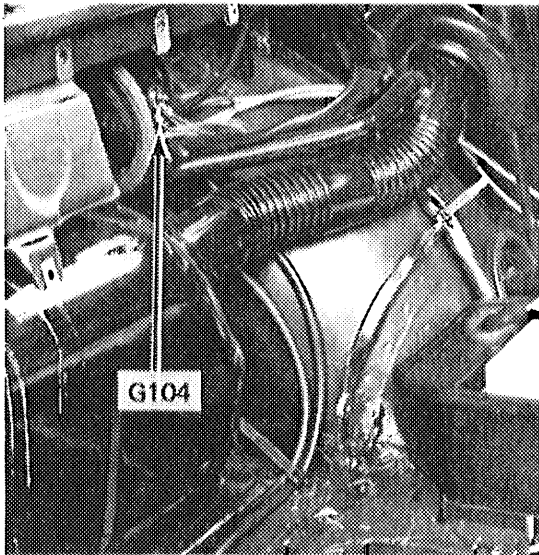


Figure 2 - Front RH Side of Trunk

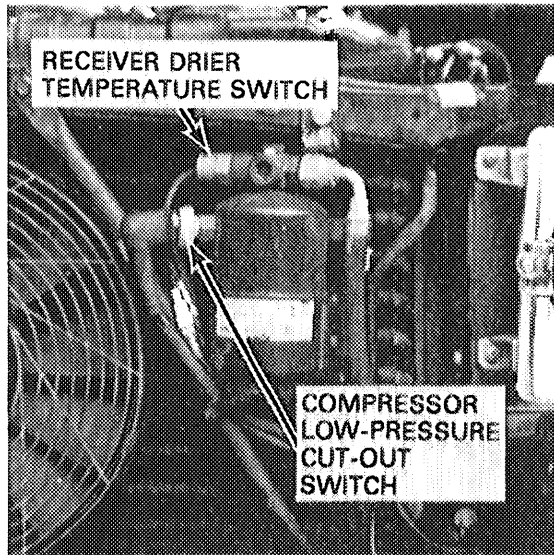


Figure 3 - LH Front of Radiator

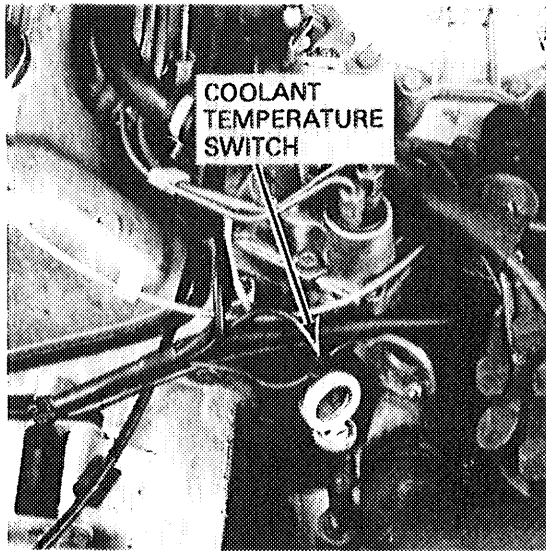


Figure 4 - Front RH Side of Engine

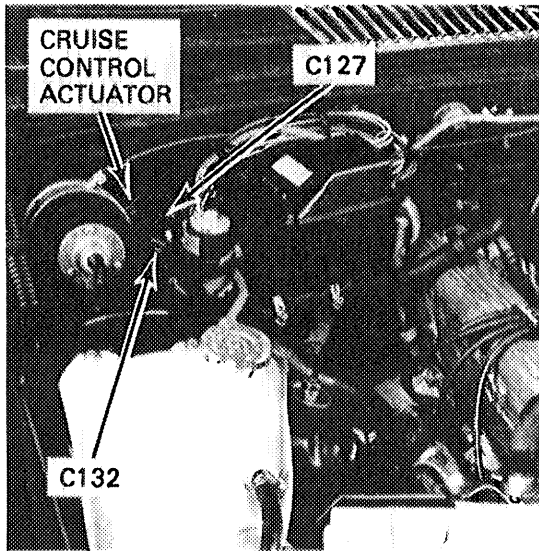


Figure 5 - Behind RH Front Wheel Well

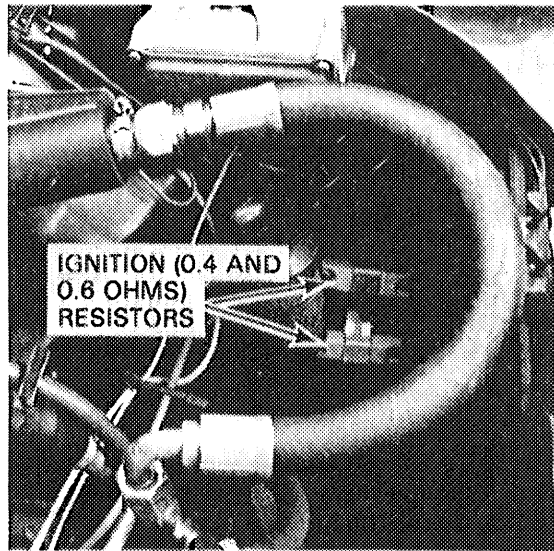


Figure 6 - Behind LH Headlight

Fuse-Circuit List

Fuse	Rating (AMPS)	Circuits Protected	Page
1	8(WT)	Automatic Antenna	126
		Clock	115
		Courtesy Lights	118
		Lights: Hazard	112
		Trunk Light	111
		Warning System	113
2	16(PK)	Auxiliary Fan	122
3	8(WT)	Power Windows	129
4	8(WT)	Power Windows	129
5	16(PK)	Horns	122
		Sliding Roof	128
6	16(PK)	Automatic Climate Control	123
7	16(PK)	Heated Seats	127
		Rear Defogger	128
8	8(WT)	Backup Lights/Transmission Kickdown	116
		Warning Indicators/Gauges	115
		Warning System	113
9	Not used		
10	8(WT)	Auxiliary Fan	122
		Lights: Turn Signal	112
		Power Windows	129
		Stoplights/Cruise Control	109
		Warning Indicators/Gauges	114

Fuse	Rating	Circuits Protected	Page
11	16(PK)	Headlights	108
		Wiper/Washer	121
12	8(WT)	Cigar Lighter	126
		Glove Box Light	120
		Heated Seats	127
13	8(WT)	Center Console Illumination	117
		Instrument Cluster Illumination	115
		Lights: Marker/License	110
		Lights: Park/Tail (RH)	110
		Warning System	113
14	2	Radio	126
15	Not used		
16	8(WT)	Lights: Park/Tail (LH)	110
17	8(WT)	Headlights (RH High Beam)	108
18	8(WT)	Headlights (LH High Beam)	108
19	16(PK)	Headlights (RH Low Beam)/Fog Lights	108
20	8(WT)	Headlights (LH Low Beam)	108
In-Line	A:2	Automatic Climate Control	124
	B:8	Automatic Climate Control	124