

COMPONENT LOCATIONS

STOP LAMPS/CRUISE CONTROL (Continued)

Page-Figure

X21/2	Terminal Block, Stop Lamp Switch/E-Speedometer (2 pin)	Behind instrument cluster	216-1
X33/1	Connector, Actuator/Cruise Control Extension (8 pin)	Behind right headlamp unit	209-1
X49/2	Connector, Backup Lamp/ Starter Lock-Out Switch (8 pin)	Above steering column	215-3

SUPPLEMENTAL RESTRAINT SYSTEM

Page-Figure

C1	SRS Energy Accumulator	At base of left door pillar	219-2
F1	Fuse/Relay Box	Behind right kick panel	218-4
N2/2	Supplemental Restraint System (SRS) Control Unit	In center console	216-2
N24	SRS Voltage Converter	At base of left door pillar	219-2
R12/1	Left Front Emergency Tensioning Retractor (ETR) Squib	At base of left door pillar	219-2
R12/2	Right Front Emergency Tensioning Retractor (ETR) Squib	At base of right door pillar	218-6
R12/3	Driver Air Bag Squib	Underside of steering wheel	
S2/1	Ignition/Starter Switch	In dash panel, right of steering column	215-5
S68/3	Driver Seat Belt Buckle Switch, Air Bag/ETR	Inside seat belt buckle	
S68/4	Front Passenger Seat Belt Buckle Switch, Air Bag/ETR	Inside seat belt buckle	
W1	Main Ground	Behind dash, right of glove box	217-2
X(N2/2) . . .	(10 pin)	Behind dash, left of steering column	215-4
X28/5	Connector, Air Bag Squib Slip Ring (2 pin)	Behind left side of dash panel, at base of steering column	215-6
X29/9	Test Connection/SRS Plug Connection (10 pin)	Right footwell area	221-3
X92	Test Connection for Diagnosis (8 pin)	Left side of engine compartment	221-2

TURN SIGNAL/HAZARD LAMPS

Page-Figure

F1	Fuse/Relay Box	Behind right kick panel	218-4
N7	Exterior Lamp Failure Monitoring Unit	Below right footrest	217-6

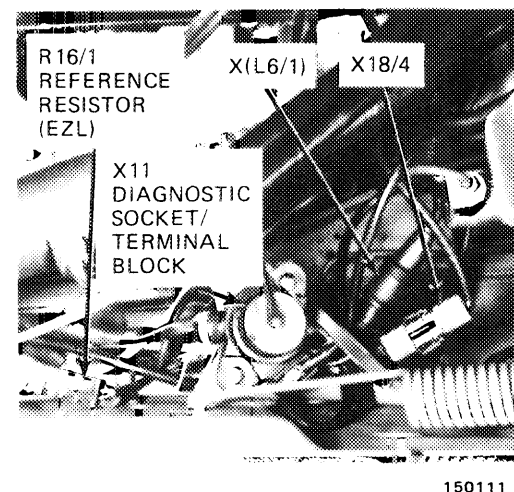


Figure 1 — Left Side of Engine Compartment

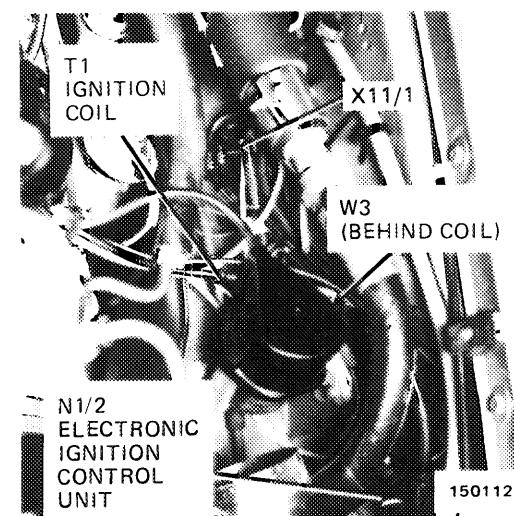


Figure 2 — Left Side of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

TURN SIGNAL/HAZARD LAMPS (Continued)

			Page-Figure
N9	Turn Signal/Hazard Warning Flasher Relay	Behind instrument cluster	216-1
S4	Combination Switch	Upper left side of steering column	
W1	Main Ground	Behind dash, right of glove box	217-2
W2	Ground	Behind right headlamp unit	202-1
W6	Ground	Left rear corner of trunk	220-2
W7	Ground	Right rear wheel well, in trunk	220-4
W9	Ground	Behind left headlamp unit	203-1
X18	Connector, Interior/Taillamp Harness (14 pin)	Behind dash, right of glove box	217-1
X49/2	Connector, Backup Lamp/Starter Lock-Out Switch (8 pin)	Above steering column	215-3
X63	Connector, Steering Column Harness (14 pin)	Under steering column	215-2

WARNING INDICATORS/GAUGES/CLOCK

			Page-Figure
B4	Fuel Level Sensor	Under convertible top storage area	219-3
B5	Oil Pressure Sensor	On oil filter housing	204-1
B10/5	Outside Temperature Sensor	Front of car, near license plate bracket	201-2
B13	Coolant Temperature Gauge Sensor	Top front of engine, on water outlet	205-2
F1	Fuse/Relay Box	Behind right kick panel	218-4
G1	Battery	Right rear corner of trunk	221-1
L2	Vehicle Speed Sensor	Left rear of transmission	214-4
M6/1	Wiper Motor	Left rear of engine compartment	211-2
N1/2	Electronic Ignition Control Unit (EZL)	Left side of engine compartment	212-2
N3	CIS-E Control Unit	Below right footrest	218-3
N4, N4/2	Cruise Control Amplifier	Between parking brake and brake support	215-4
N7	Exterior Lamp Failure Monitoring Unit	Below right footrest	217-6
N8	Idle Speed Control Unit	Behind glove box	218-2
N16/4	Fuel Pump Relay	Behind glove box	218-2
N30	ABS Control Unit	Below right footrest	218-3
N31	ABS Hydraulic Unit (MY87)	Right front corner of engine compartment	209-1
N31	ABS Hydraulic Unit (MY86)	Left front corner of engine compartment	209-2
S10/1	Left Front Brake Pad Wear Sensor	In left front brake pad	
S10/2	Right Front Brake Pad Wear Sensor	In right front brake pad	

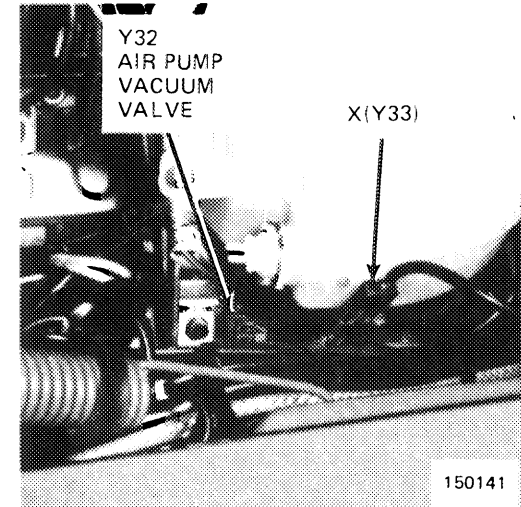


Figure 1 — Right Side of Engine Compartment

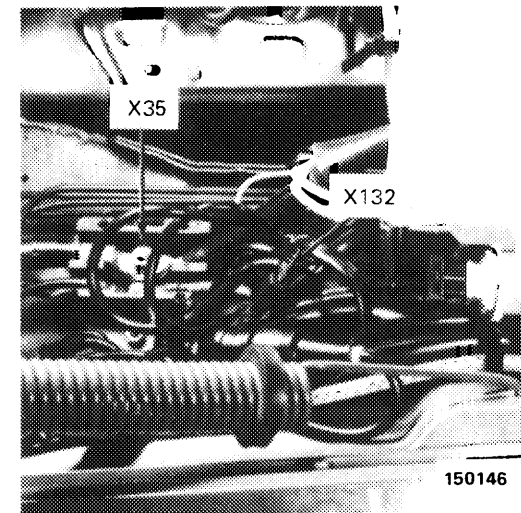


Figure 2 — Top of Right Front Wheel Well

REVISIONS:

COMPONENT LOCATIONS

WARNING INDICATORS/GAUGES/CLOCK (Continued)

Page-Figure

S11	Brake Fluid Level Switch	Left rear corner of engine compartment, top of brake fluid reservoir	211-2
S12	Parking Brake Switch	On parking brake support	
S41	Coolant Level Switch	Right wheel well, bottom of coolant reservoir	210-1
S42	Washer Fluid Level Switch	Left side of engine compartment, top of washer fluid reservoir	209-2
S43	Oil Level Switch	On side of oil pan	214-2
W1	Main Ground	Behind dash, right of glove box	217-2
W2	Ground	Behind right headlamp unit	202-1
W7	Ground	Right rear wheel well, in trunk	220-4
W10	Ground, Battery	Right rear corner of trunk, near battery	220-3
X(B10/5)	(2 pin)	Behind right headlamp unit	209-1
X3	Terminal Block, E-Speedometer (2 pin)	Behind instrument cluster	216-1
X4/3	Connector, Battery/Overload Protection, Circuit 30 (1 pin)	Above fuse/relay box, at right kick panel	218-4
X11	Diagnostic Socket/Terminal Block	Top of left front wheel well	212-1
X18	Connector, Interior/Tailamp Harness (14 pin)	Behind dash, right of glove box	217-1
X18/4	Connector, Left Front Brake Pad Sensor (2 pin)	Left side of engine compartment	212-1
X26	Connector, Interior/Engine Wiring Harness (14 pin)	Above right side of right footwell	217-4
X27	Connector, Starter Wiring Harness (3 pin)	Right rear of engine compartment	210-2
X49/2	Connector, Backup Lamp/Starter Lock-Out Switch (8 pin)	Above steering column	215-3
X51/1	Terminal Block, Circuits 87/30 (2 pin)	In fuse box, at right kick panel	
X132	Connector, Right Front Brake Pad Wear Sensor (2 pin)	Right rear corner of engine compartment	213-2

WARNING SYSTEM

Page-Figure

F1	Fuse/Relay Box	Behind right kick panel	218-4
M6/1	Wiper Motor	Left rear of engine compartment	211-2
N2/4	Warning Module	Above brake pedal	215-4
N11/5	Dome Lamp Timer-Relay	At right kick panel	217-3
S8/1	Warning Buzzer Switch	In ignition switch assembly	215-5
S10/1	Left Front Brake Pad Wear Sensor	In left front brake pad	

REVISIONS:

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

COMPONENT LOCATIONS

WARNING SYSTEM (Continued)

Page-Figure

S12	Parking Brake Switch	On parking brake support	
S17/13 . . .	Left Door Switch	In left door jamb	
S17/14 . . .	Right Door Switch	In right door jamb	
S68/1 . . .	Driver Seat Belt Buckle Switch .	In left seat belt buckle	
W1	Main Ground	Behind dash, right of glove box	217-2
X(68/1) . .	(2 pin)	Under left seat	
X18/4 . . .	Connector, Left Front Brake Pad Sensor (2 pin)	Left side of engine compartment	212-1

WIPER/WASHER

Page-Figure


F1	Fuse/Relay Box	Behind right kick panel	218-4
M5/1	Windshield Washer Pump	Below washer fluid reservoir	207-2
M6/1	Wiper Motor	Left rear of engine compartment.	211-2
N12	Interval Wiper Relay	Above steering column	215-3
R2/2	Left Heated Windshield Washer Nozzle	Underside of hood, at left washer nozzle	
R2/3	Right Heated Windshield Washer Nozzle.	Underside of hood, at right washer nozzle	208-1
S4	Combination Switch	Upper left side of steering column	
W1	Main Ground	Behind dash, right of glove box	217-2
W2	Ground	Behind right headlamp unit	202-1
X63	Connector, Steering Column Harness (14 pin)	Under steering column	215-2

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

REVISIONS:

 214



187

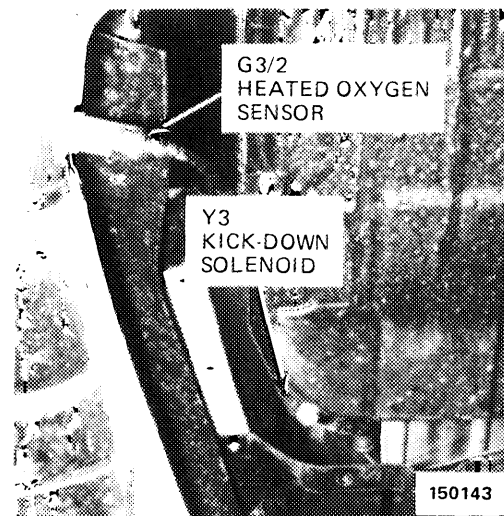


Figure 3 — Underside of Transmission



Figure 5 — Inside of Left Front Wheel

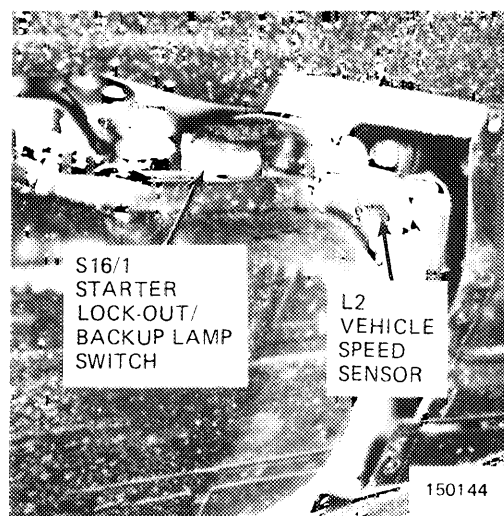


Figure 4 — Underside of Transmission

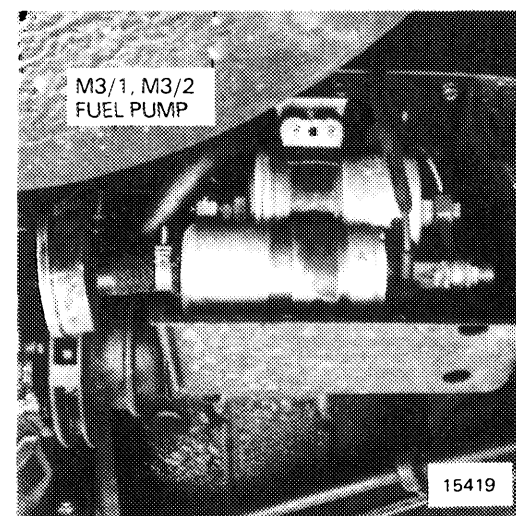


Figure 6 — Underside of Car, Near Differential

REVISIONS:

COMPONENT LOCATIONS

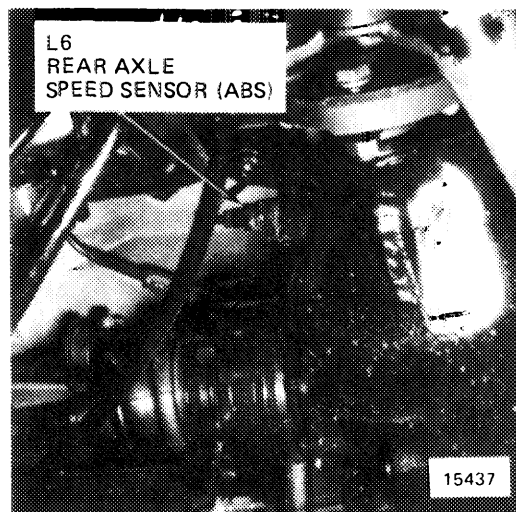


Figure 1 - Rear Underside of Car

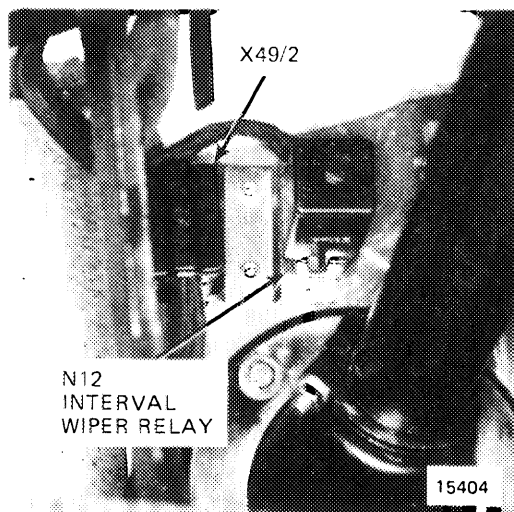
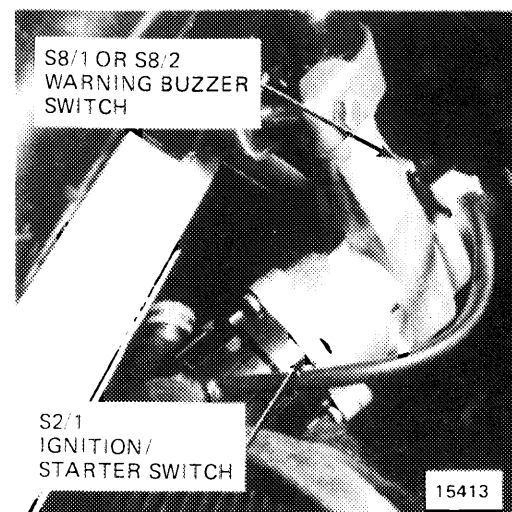
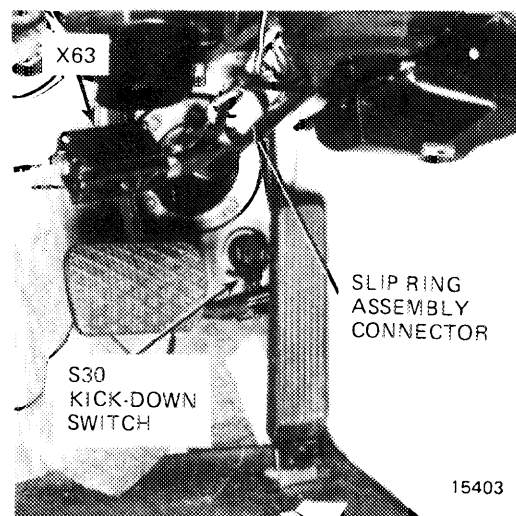
Figure 3 - Behind Dash Panel,
Above Steering ColumnFigure 5 - Behind Dash Panel,
Right of Steering Column

Figure 2 - Left Footwell Area

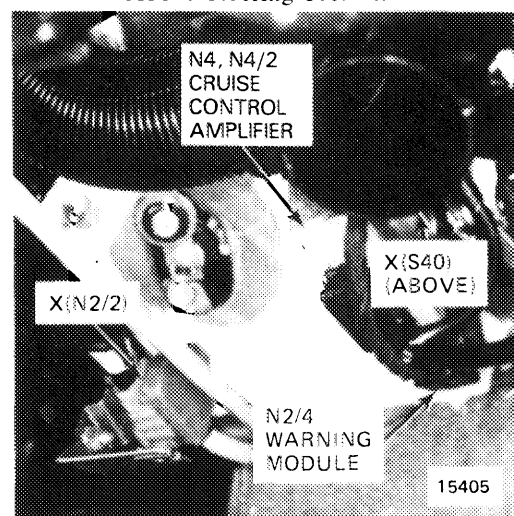
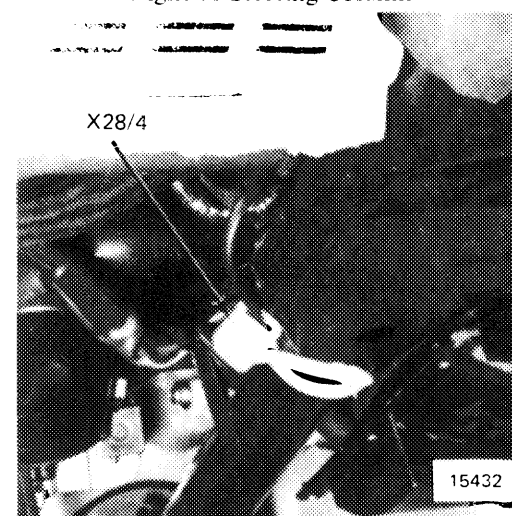
Figure 4 - Behind Dash Panel,
Above Steering Column

Figure 6 - Behind Left Side of Dash Panel

REVISIONS:

COMPONENT LOCATIONS

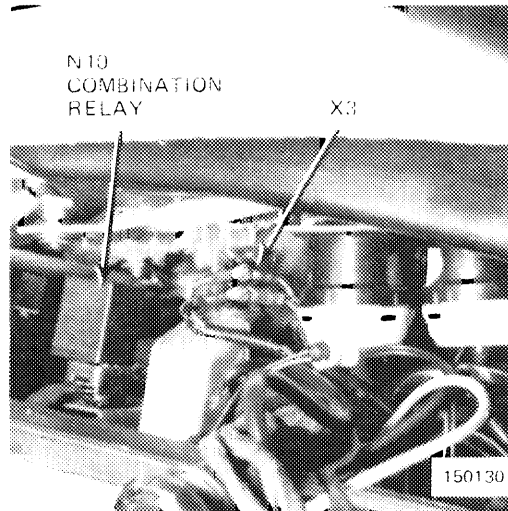


Figure 1 — Behind Instrument Cluster

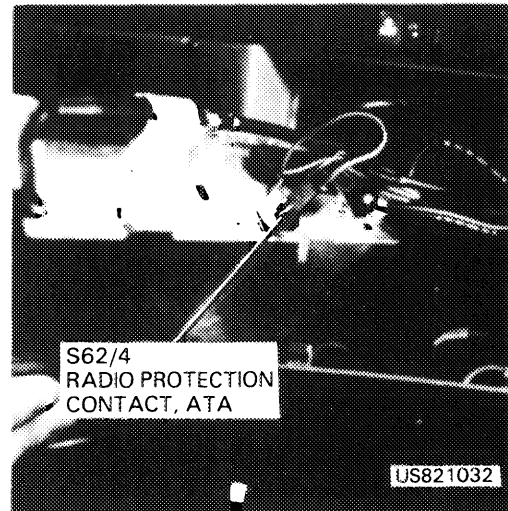


Figure 3 — Front of Console, Behind Radio (MY 87)

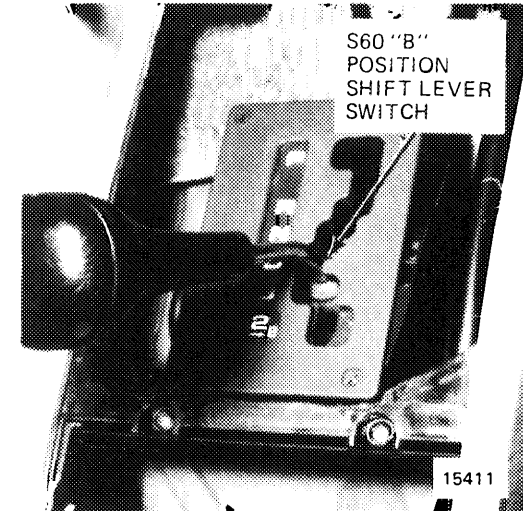


Figure 5 — Center Console

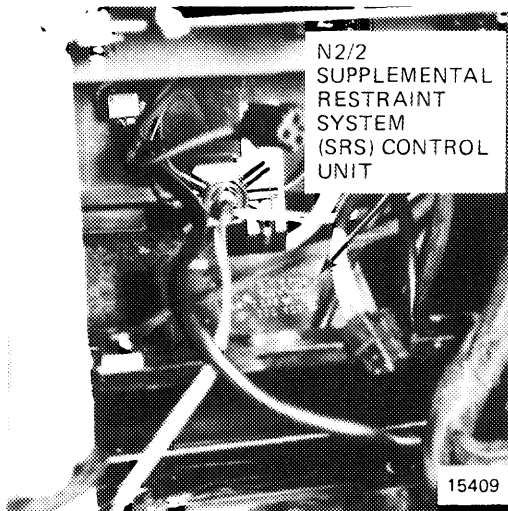


Figure 2 — Behind Front of Console

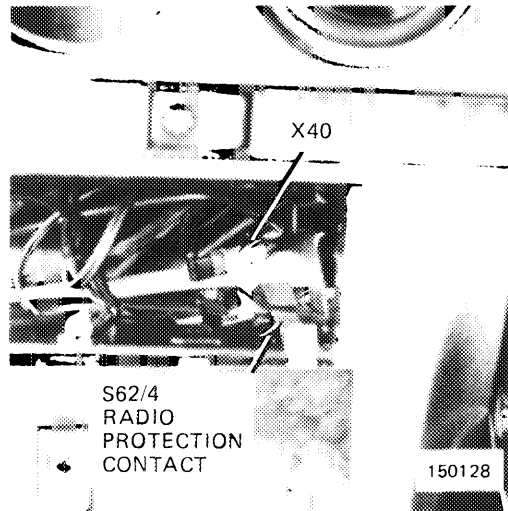


Figure 4 — Front of Console (Radio Removed)

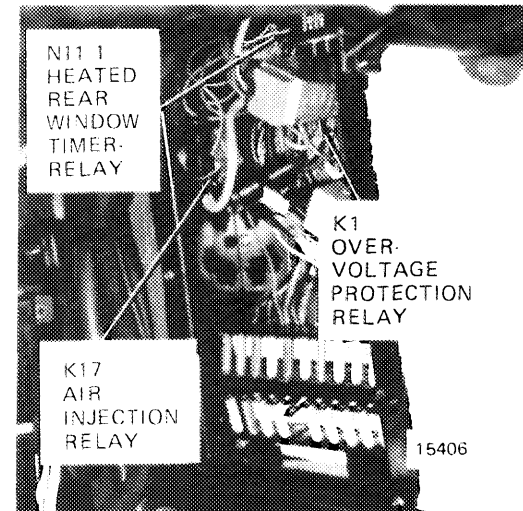


Figure 6 — Right Kick Panel

REVISIONS:

COMPONENT LOCATIONS

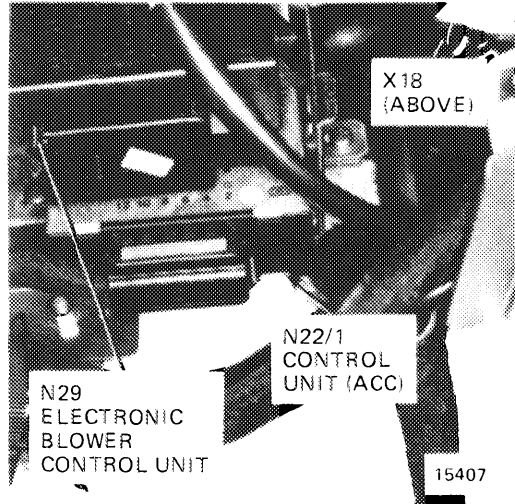


Figure 1 — Behind Glove Box

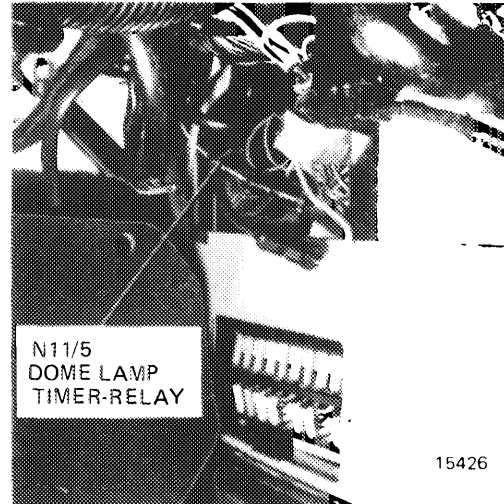


Figure 3 — Right Kick Panel

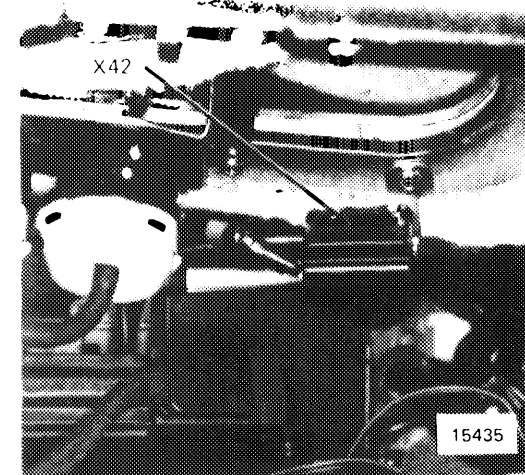


Figure 5 — Behind Glove Box

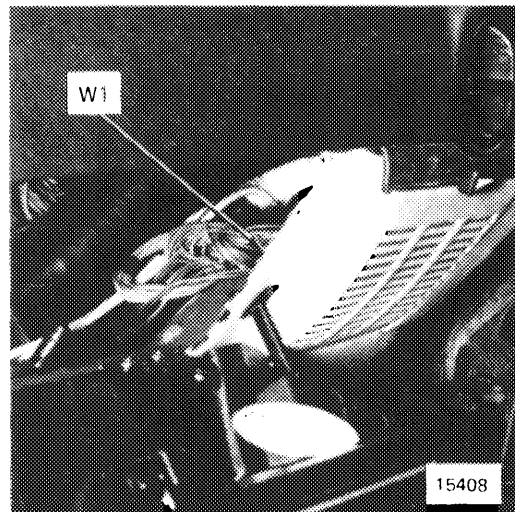


Figure 2 — Right Side of Glove Box

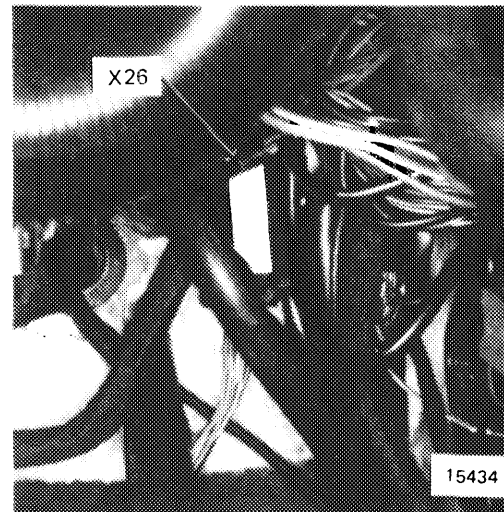


Figure 4 — Behind Right Side of Dash Panel,
Forward of Kick Panel


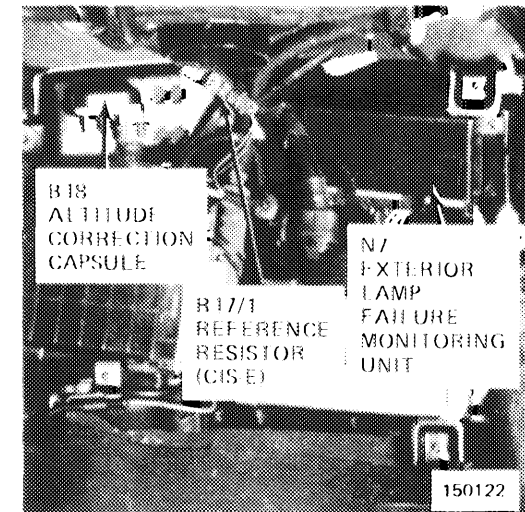



Figure 6 — Right Footwell Area

 REVISIONS:




1187

COMPONENT LOCATIONS

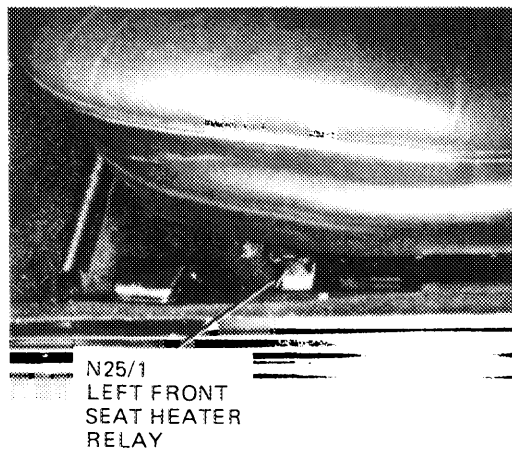


15402

Figure 1 — Left Door Sill

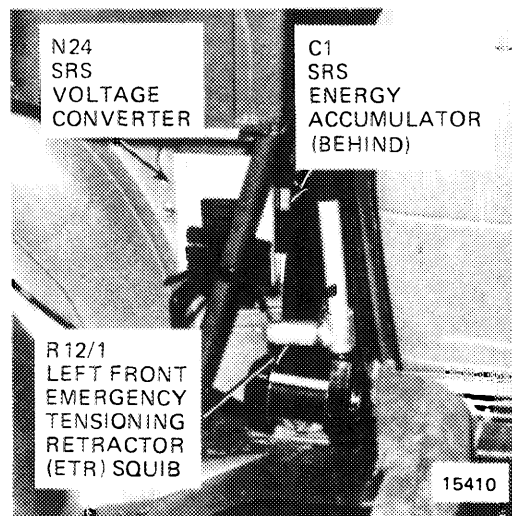


15410

Figure 2 — Rear of Left Door

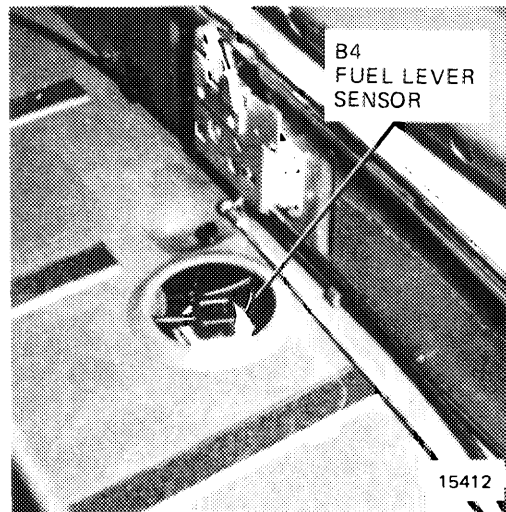


15412

Figure 3 — Convertible Top Storage Area

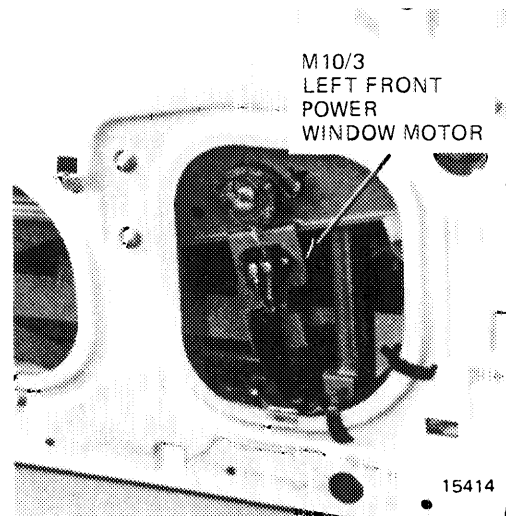


15414

Figure 4 — Left Door

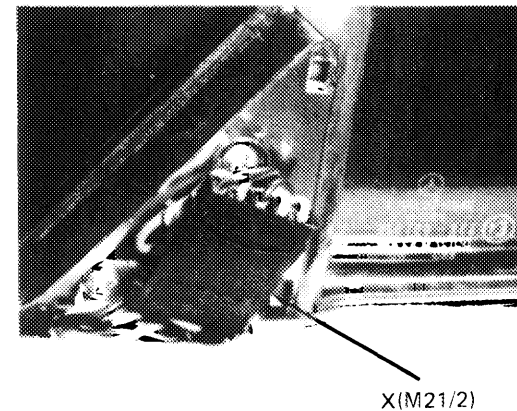

15430

Figure 5 — Right Door

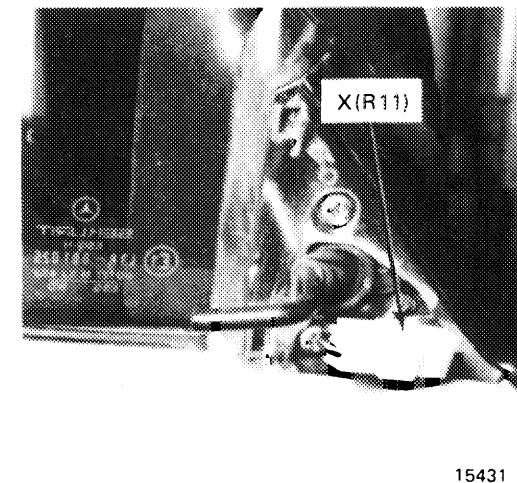

15431

Figure 6 — Left Door

REVISIONS:



187

COMPONENT LOCATIONS

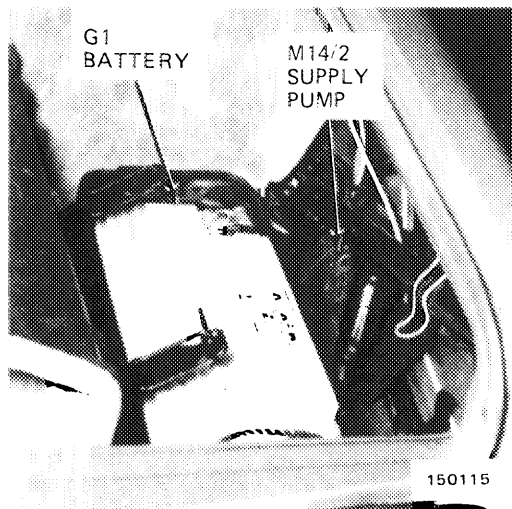


Figure 1 — Right Rear Corner of Trunk

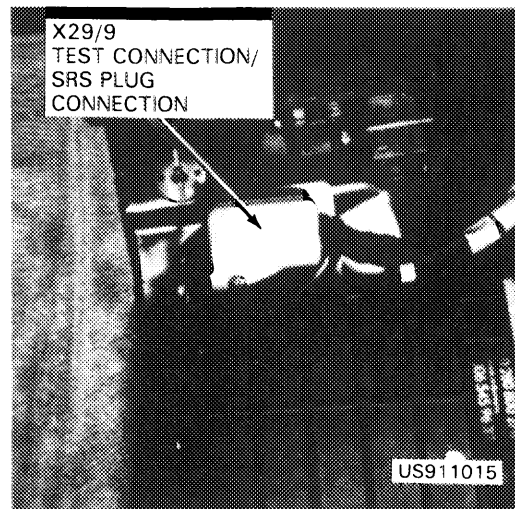


Figure 3 — Right Footwell Area

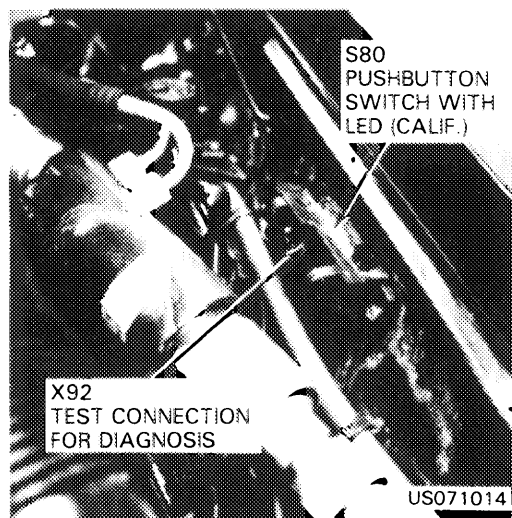


Figure 2 — Left Side of Engine Compartment

REVISIONS: